 




SUPERSAVER SURFACE MOUNT MESSAGE CENTER INSTRUCTIONS

MC5316
8/19/22
REV #2

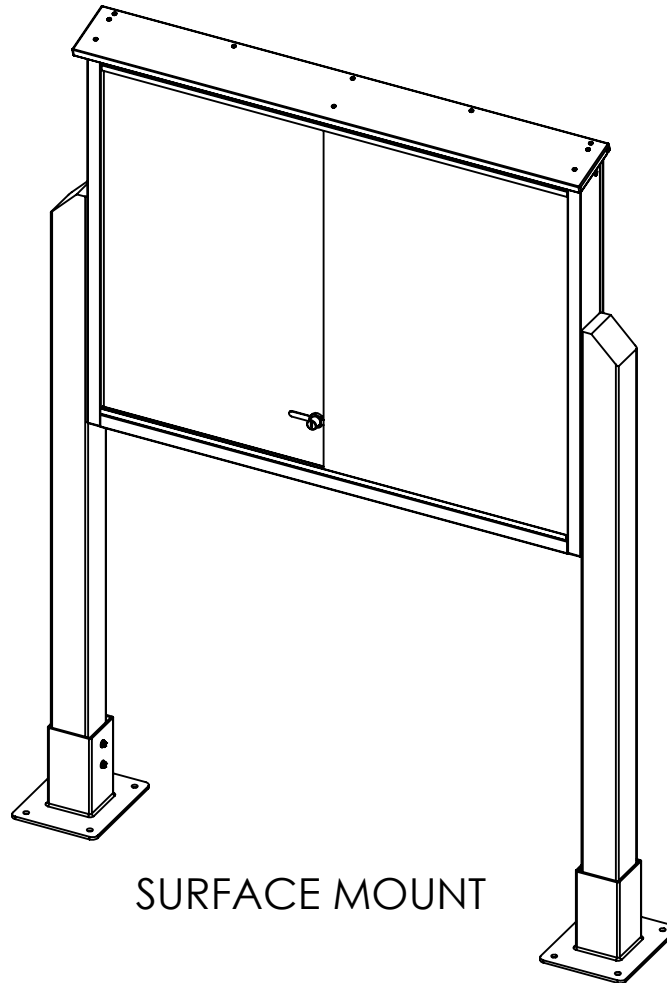


SURFACE MOUNT

  SUPERSAVER SURFACE MOUNT MESSAGE CENTER INSTRUCTIONS

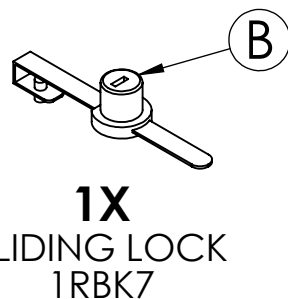
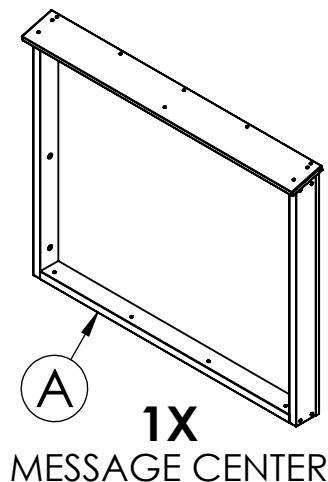


REQUIRED TOOLS (NOT INCLUDED)

 
- 1 - 7/16" SOCKET
- 1 - SCREW GUN
- 1 - 1/4" DRILL BIT
- 1 - #2 PHILLIPS BIT
- 1 - LEVEL





4X
1/4" X 4" LAG SCREW
HLAG025C400188

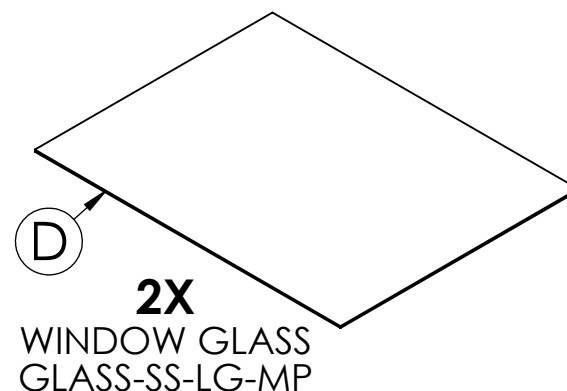  

8X
1/4" FLAT WASHER
WUSS025WAS188

 

  4X
1/4" X 1-1/2" LAG SCREW
HLAG025C150188

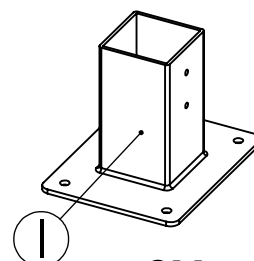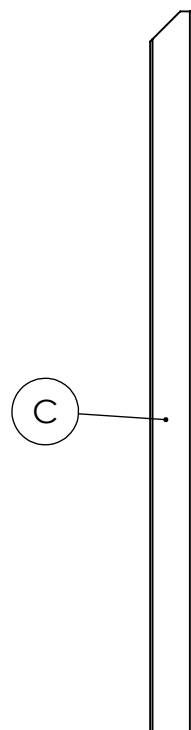




**COMPONENTS &
TOOLS REQUIRED
FOR ASSEMBLY**

2/4

SUPERSAVER SURFACE MOUNT MESSAGE CENTER INSTRUCTIONS

STEP #1

   - Lay Message Center (A) on the ground
- Put posts (C) on the side of Message Center (A) with holes lining up to pilot holes on posts (C)
- Take 1/4 X 4" Lag Screw (F) put thru washer (H) thru Message Center (A) and screw into post (C)
- Repeat for other Lag Screws

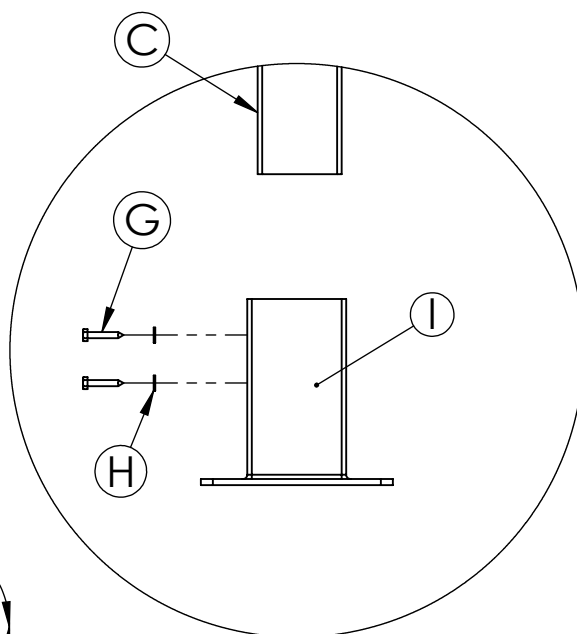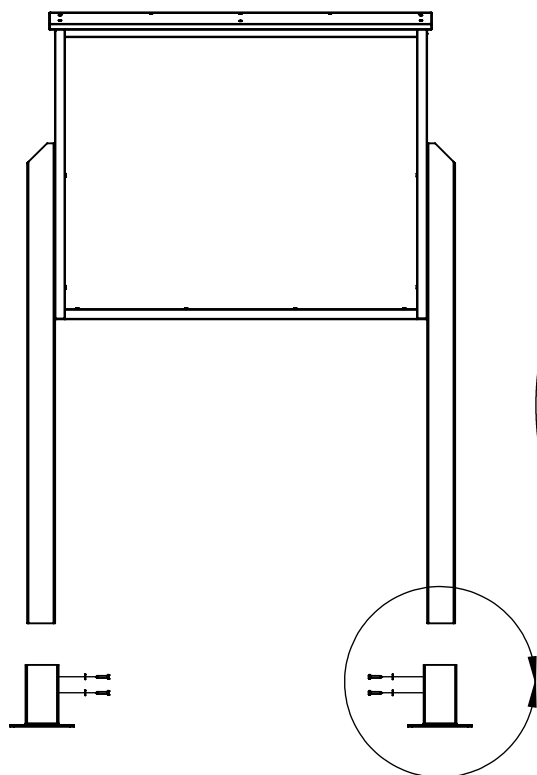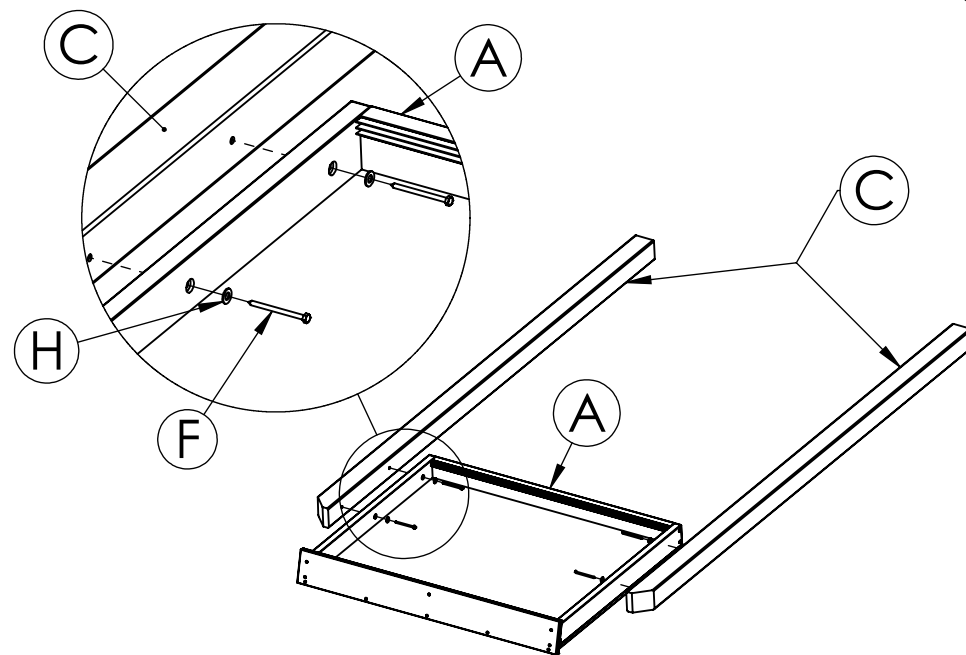

STEP #2

- Keep the Message Center with the posts attached on the ground
- Put the Surface Mount Bases (I) onto the post bottoms (C)
- Fasten the 1-1/2" Lag Screw (G) thru the washer (H) thru surface mount base (I) and screw into post (C)
- Repeat for other 3 Lag Screws (G)
- Lift properly into standing position
- Secure Surface mount bases to ground

 
**ATTACH POST TO
MESSAGE CENTER**

3/4

SUPERSAVER SURFACE MOUNT MESSAGE CENTER INSTRUCTIONS





STEP #3

- A. Remove protective film from Window Glass (D)
- B. Gently Bend the Window Glass (D) into Door Track (J)
- C. Make sure one piece of Window Glass (D) is in the rear track, and one piece is in the front track
- D. Attach Sliding Lock (B) set screw to Window Glass (D) by tightening in desired lock location
- E. Secure Windows by locking the Sliding Lock (B)

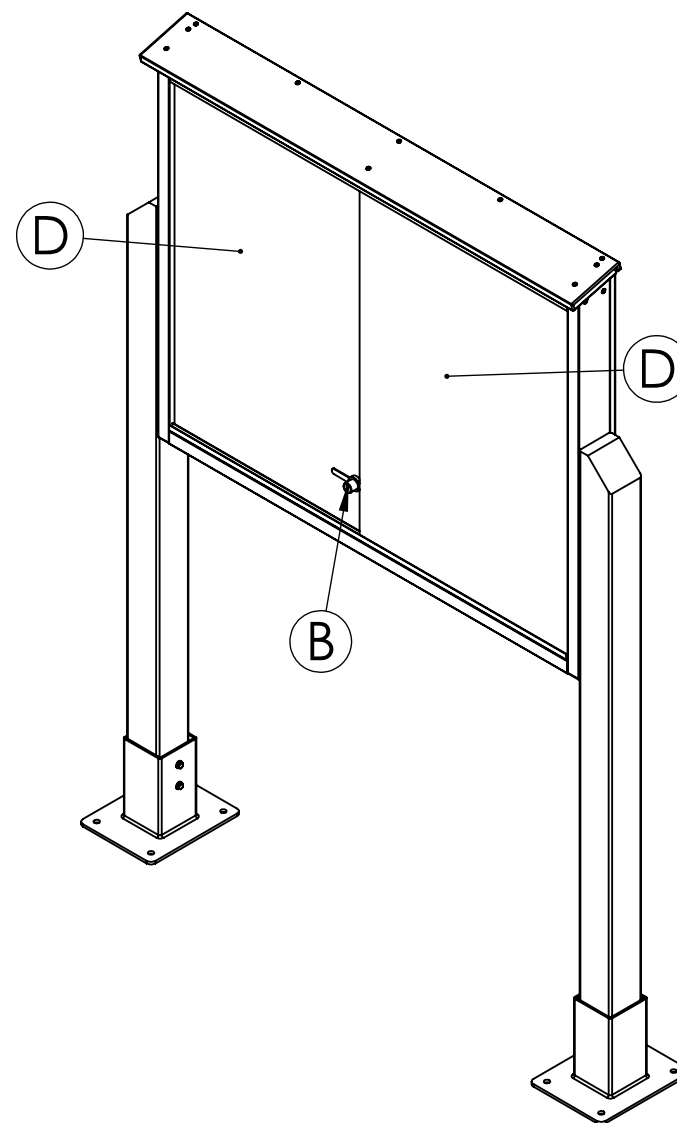

SUPERSAVER SURFACE MOUNT MESSAGE CENTER SPECIFICATIONS

    MC5316 SURFACE MOUNT
8/19/22
REV #2

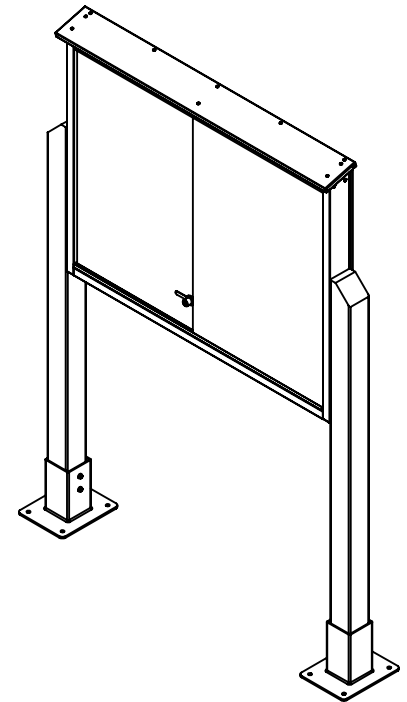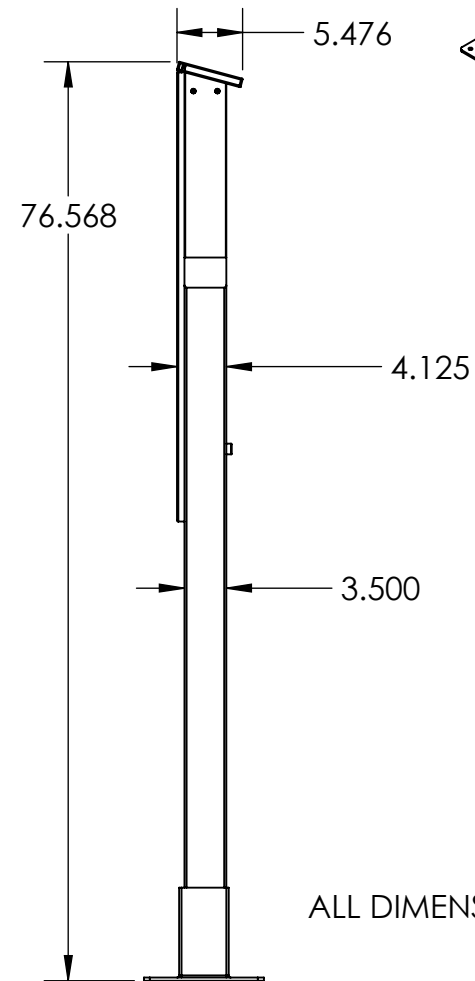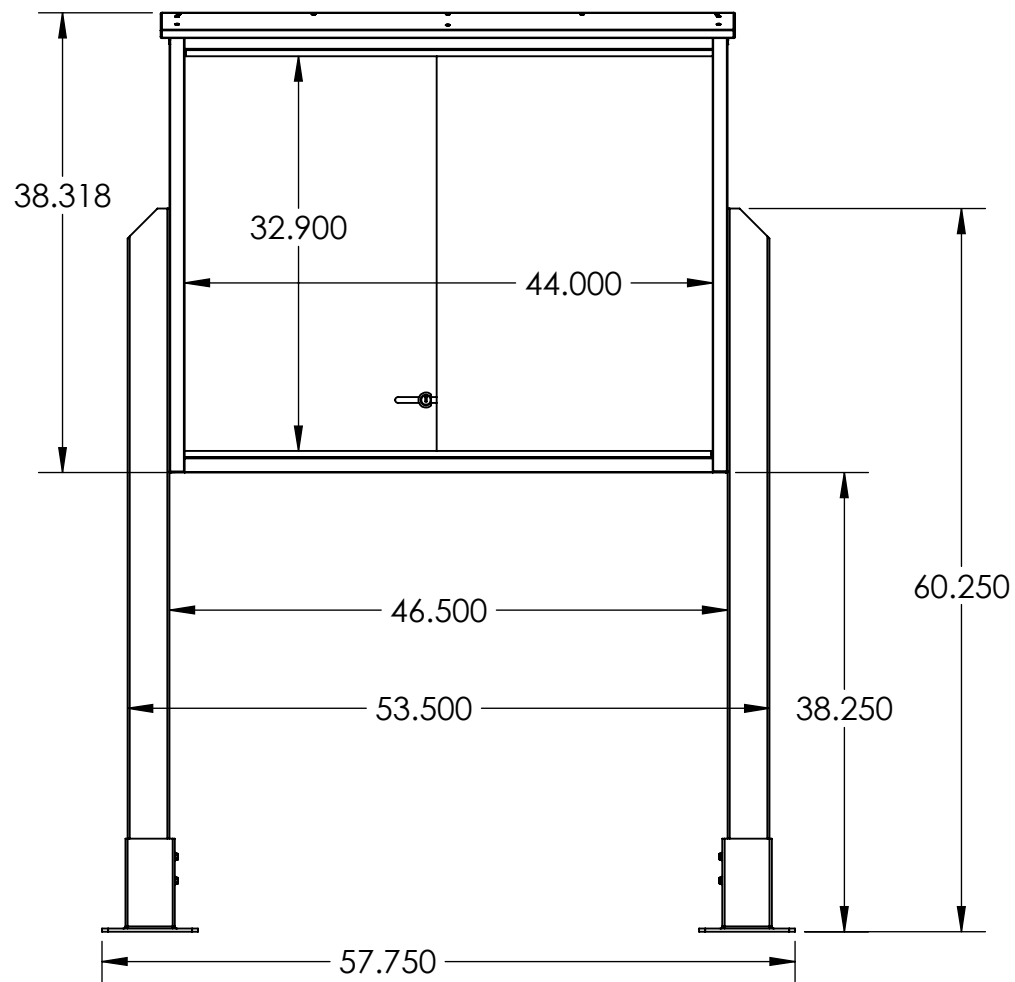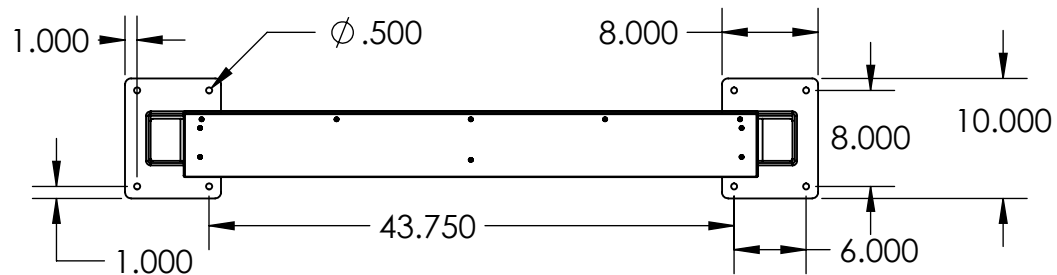

ALL DIMENSIONS SHOWN IN INCHES