


# **BENCH INSTRUCTIONS**


BC1448 REV# 1 3-29-2017

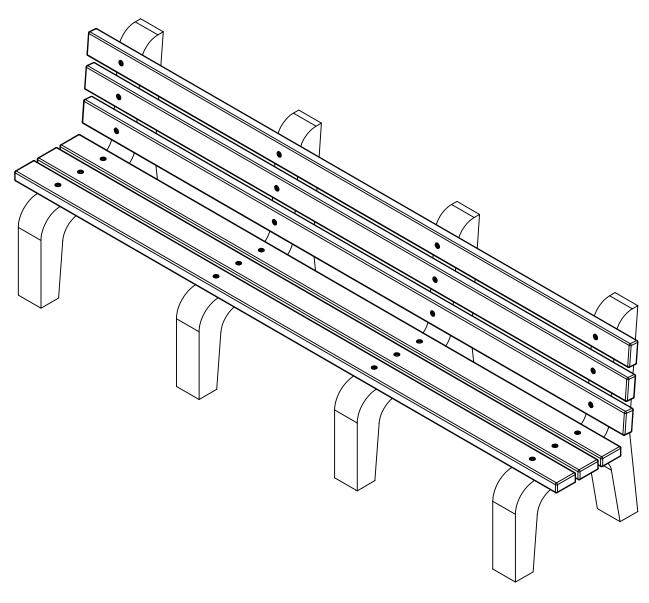


### **BENCH INSTRUCTIONS**

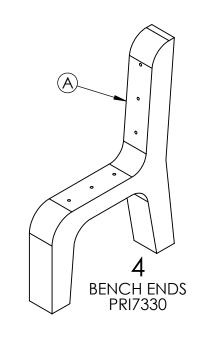

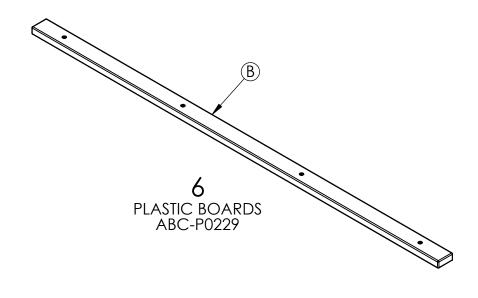




48 1/4" FLAT WASHER WUSS025WAS188



24 1/4" NY LOCK NUT NNYL025CNUT188



24 1/4" x 4" BUTTON HEAD BOLT SCBH025C400188


# REQUIRED TOOLS: (NOT INCLUDED)

- SCREW GUN
- 7/16" SOCKET
- 3/32" ALLEN WRENCH
- 90 DEGREE SQUARE

NOTE: IT IS IMPORTANT TO KEEP ALL SCREWS LOOSE DURING ASSEMBLY UNTIL ENTIRE BENCH IS ASSEMBLED

INCLUDED HARDWARE & REQUIRED TOOLS FOR ASSEMBLY


## **BENCH INSTRUCTIONS**

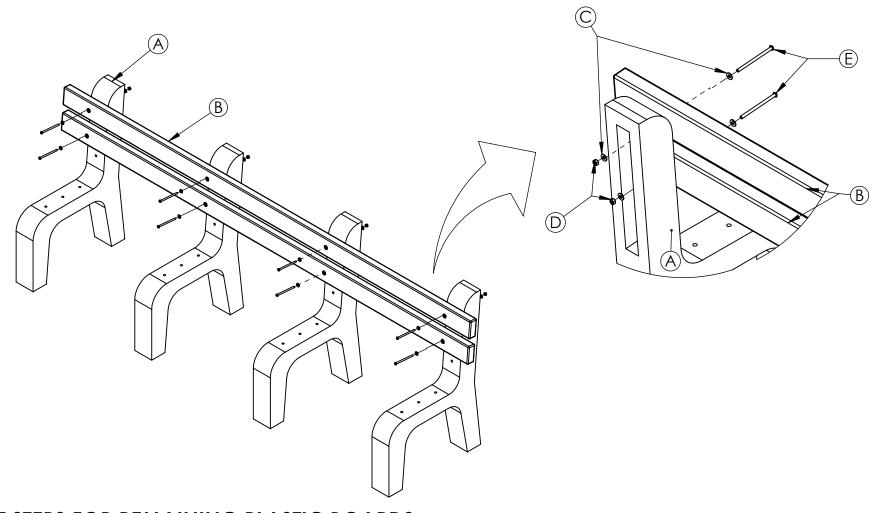

REPEAT STEPS FOR REMAINING PLASTIC BOARDS

SQUARE BOARDS TO PLASTIC ENDS AND FLUSH TO EACH OTHER

TIGHTEN ALL BOLTS

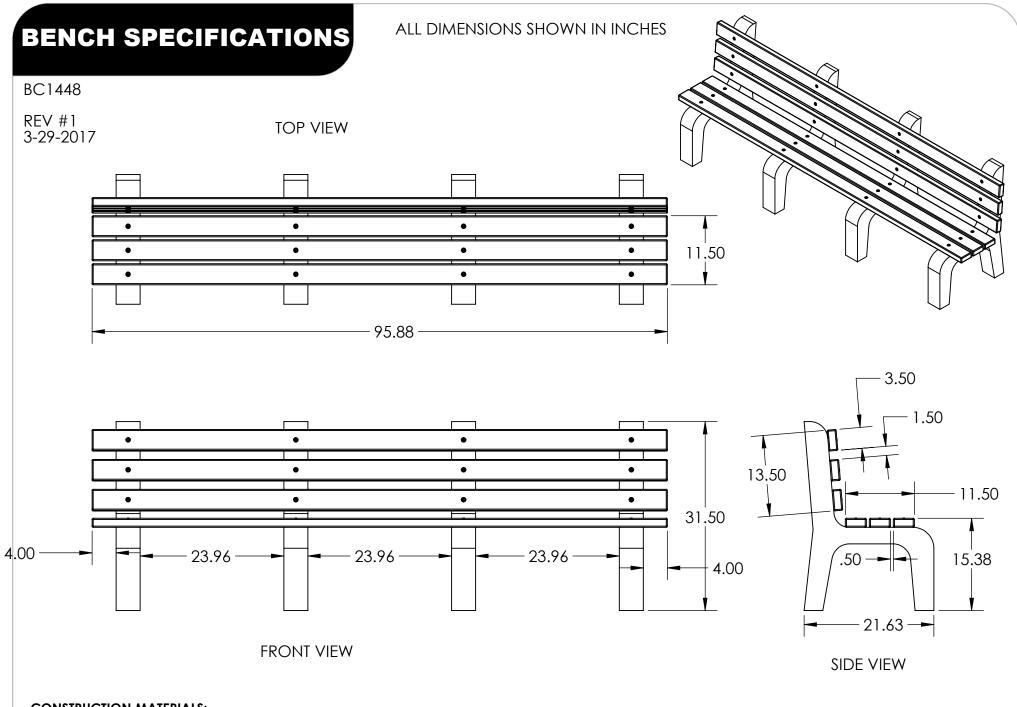

#### **CONSTRUCTION MATERIALS:**

Recycled Plastic
HARDWARE:
Stainless Steel