



CHAIR INSTRUCTIONS


CF1210 REV# 1

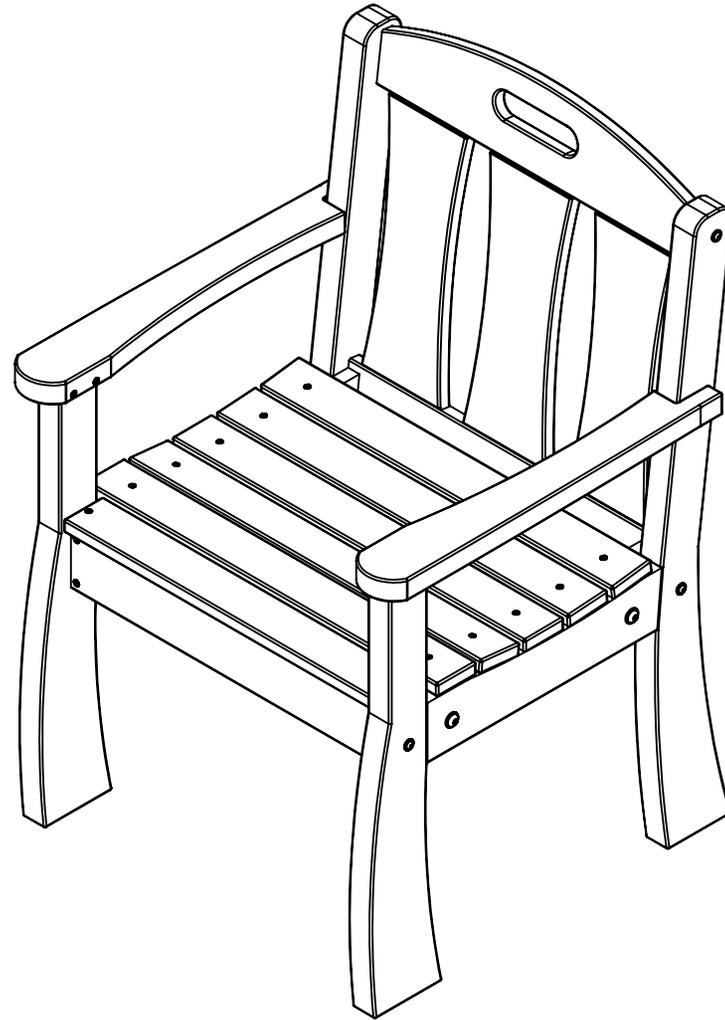


CHAIR INSTRUCTIONS

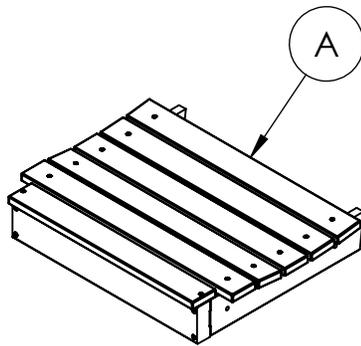

1
Seat Assembly

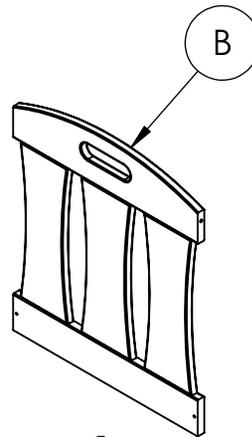

1
Seat Back

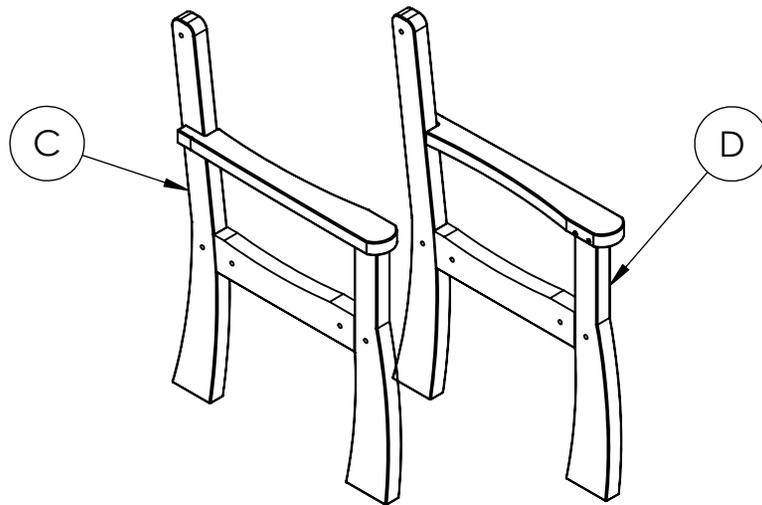


2
Bench Ends


REQUIRED TOOLS (NOT INCLUDED)

- POWER DRILL
- 7/32 ALLEN WRENCH
- 9/16 WRENCH
- #2 SQUARE DRIVE


HARDWARE

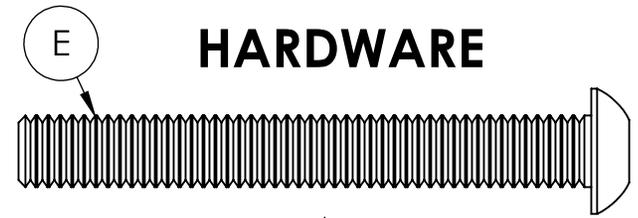


4
3/8" x 3" Button Head Cap Screws

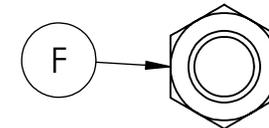


4
3/8" Hex Nuts

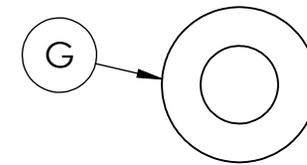

8
3/8" Flat Washer

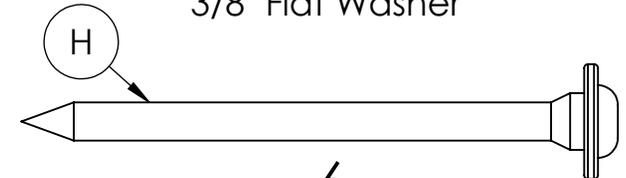

6
Truss Lag Screw

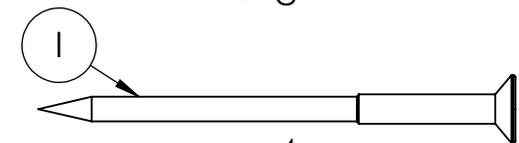


4
#10 x 2.5 Flat Head Screw

**HARDWARE &
TOOLS REQUIRED
FOR ASSEMBLY**


2/5

CHAIR INSTRUCTIONS

STEP 1


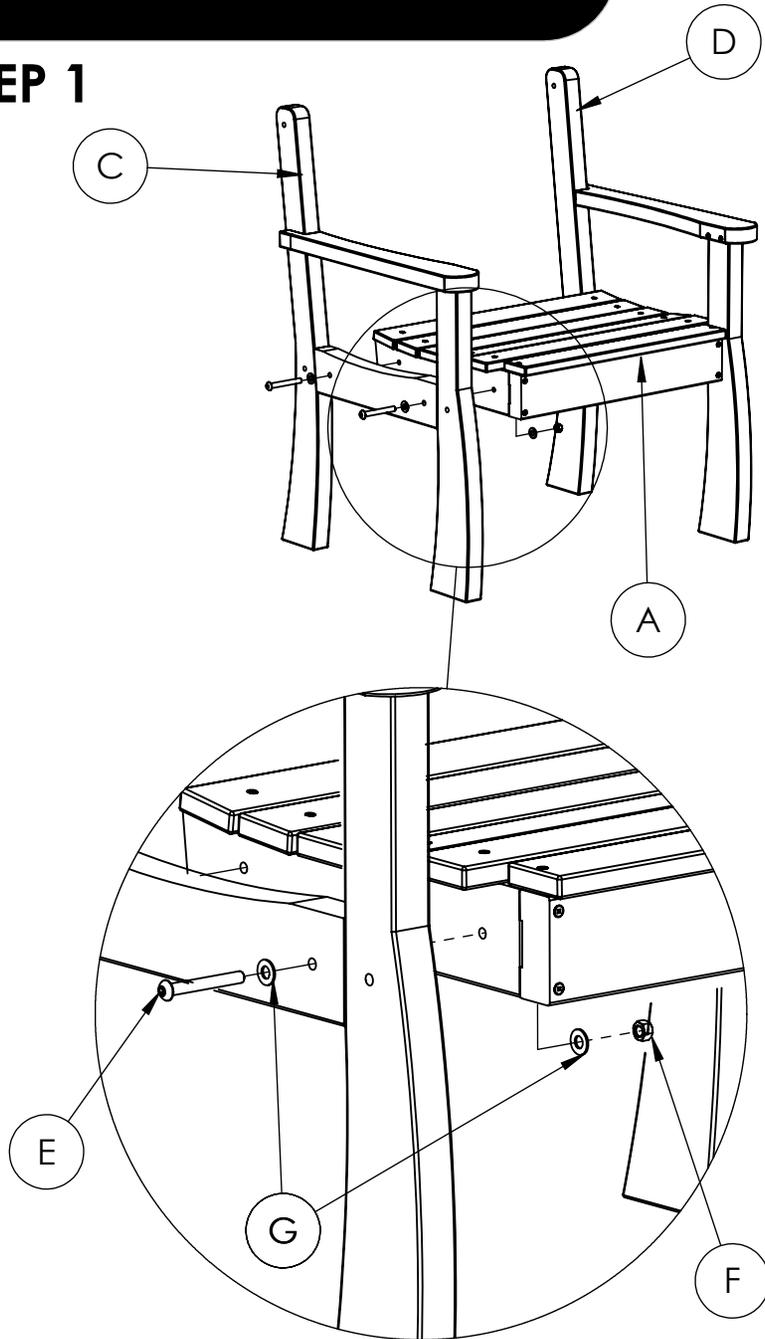


STEP 2


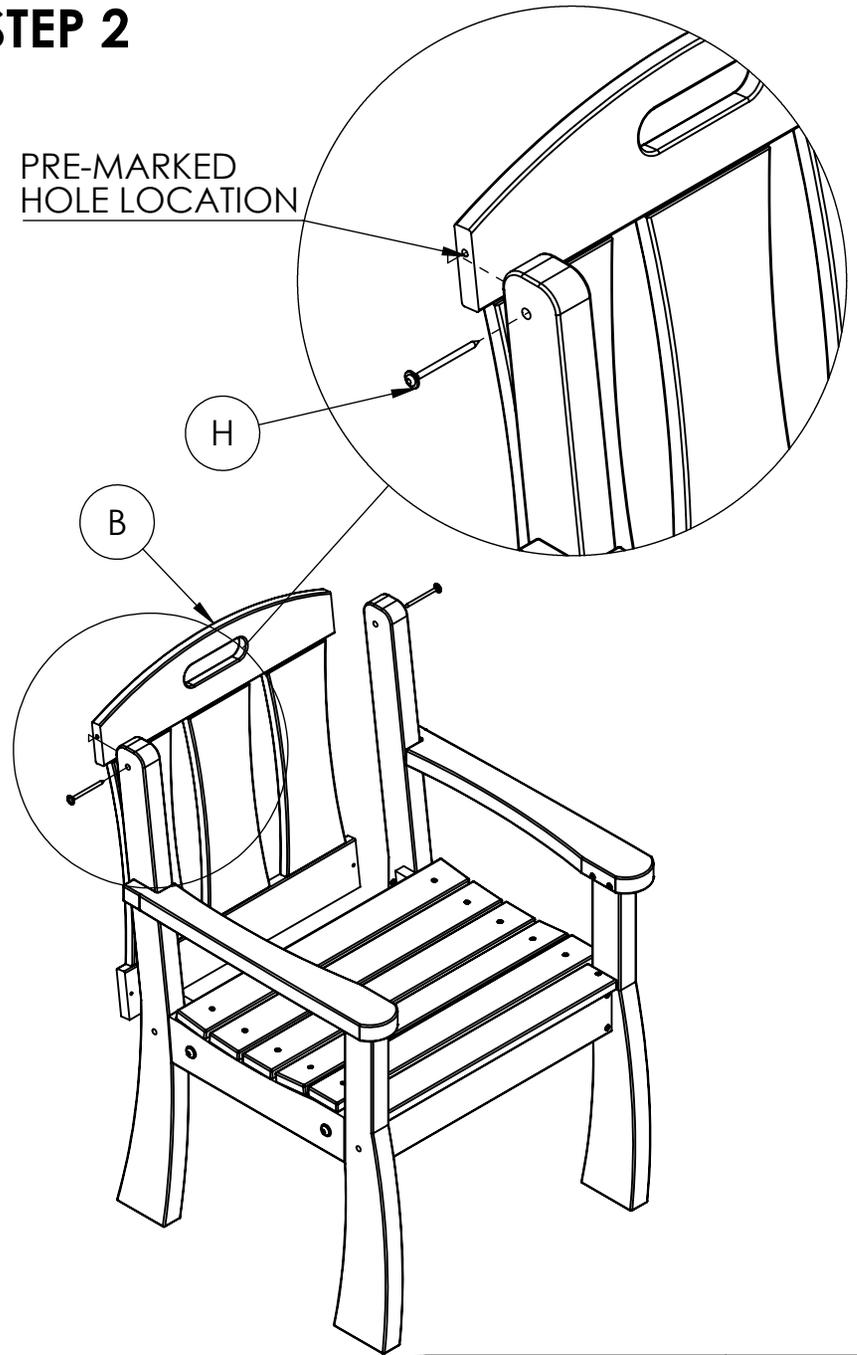


CHAIR INSTRUCTIONS





STEP 3

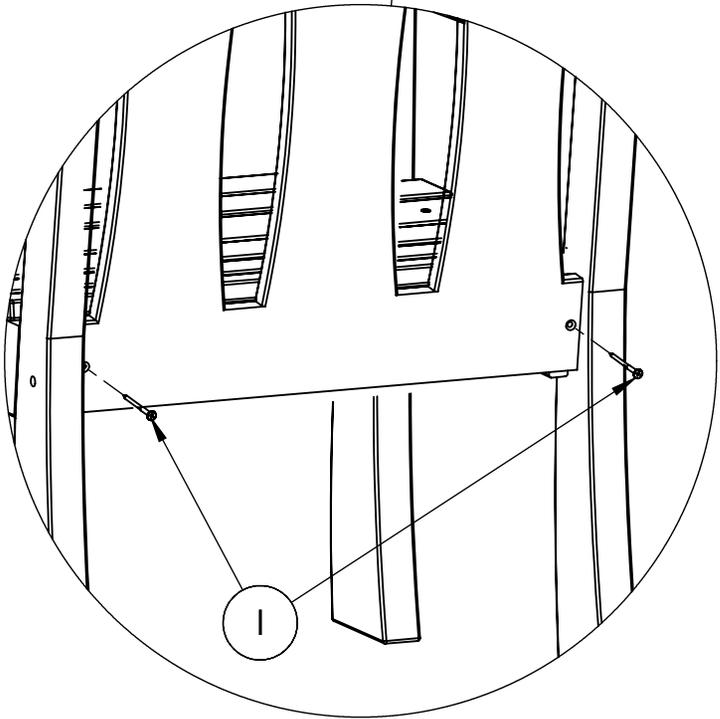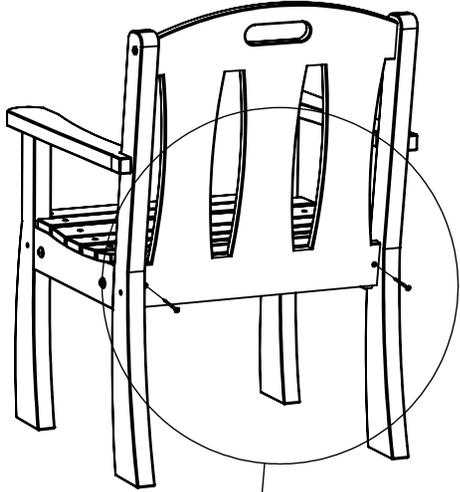

STEP 4

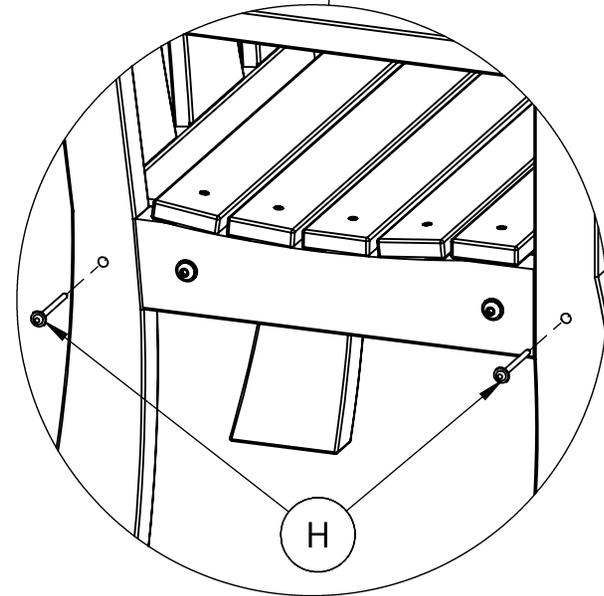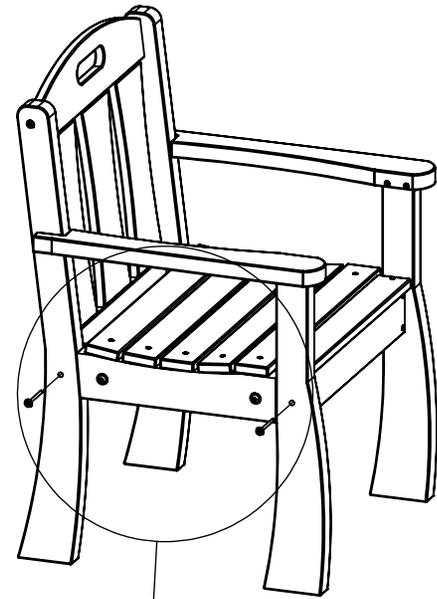

CHAIR SPECIFICATIONS

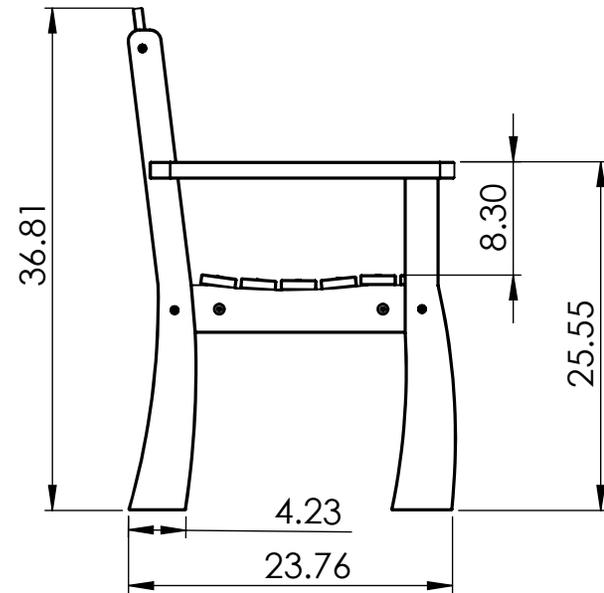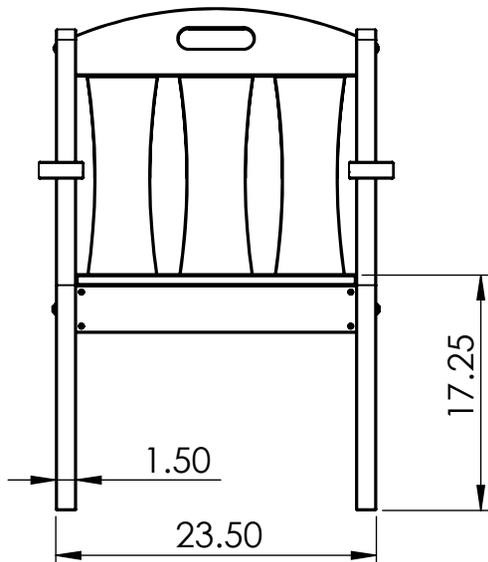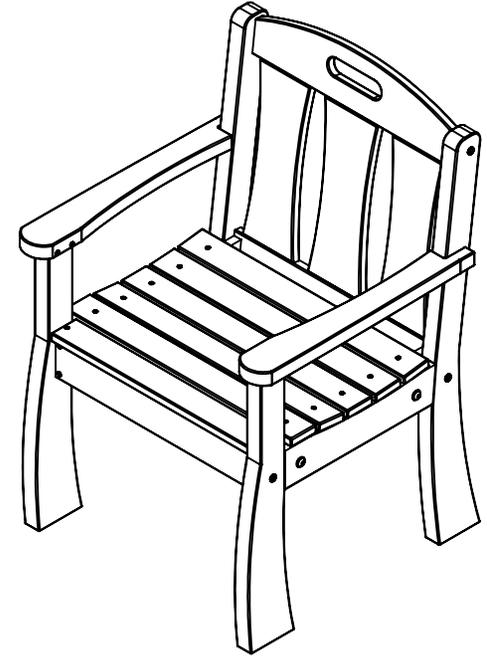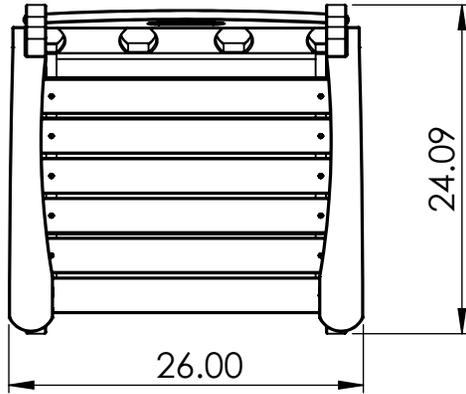

CONSTRUCTION MATERIALS:
Recycled Plastic
HARDWARE:
Stainless Steel

ALL DIMENSIONS SHOWN IN INCHES