


Installation Instructions

Park-It Bike Racks - Surface Mount

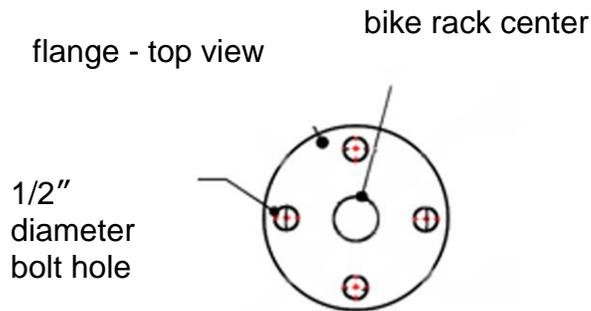

- Note:** Surface mounting hardware sold separately. Use 3/8" x 4" lag bolts and 1/2" x 3" anchors. It is recommended that if installing in concrete, cure 28 days prior to mounting.
- Step 1:** Place the bike rack in its desired location with the flanges in place. Mark the center of the holes in each of the flanges on the mounting surface.
- Step 2:** Move bike rack aside. Using a 1/2" masonry drill bit, drill holes where marked, 4" deep in cement or 3" deep if installing in asphalt.
- Step 3:** Blow the hole clean of dust and other material. Insert anchor shields into holes and gently tap into place with a hammer.
- Step 4:** Align holes in flange with anchors and secure with 3/8" x 4" lag bolts.