



# INSTRUCTIONS


ADP3500 REV# 1

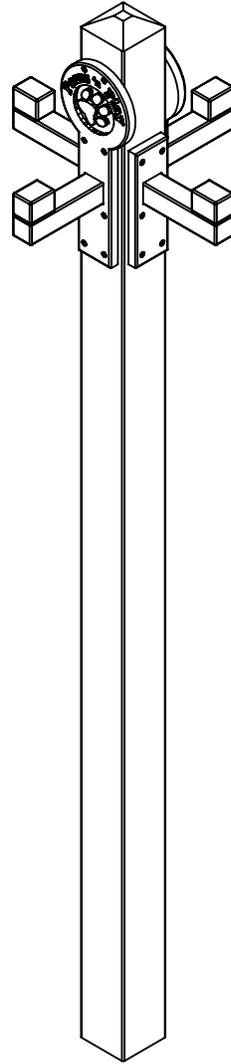


# INSTRUCTIONS

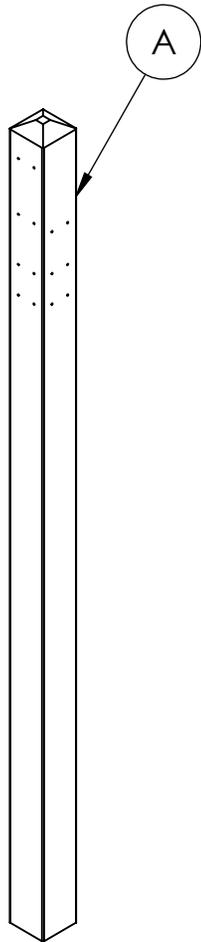

**1**  
POST

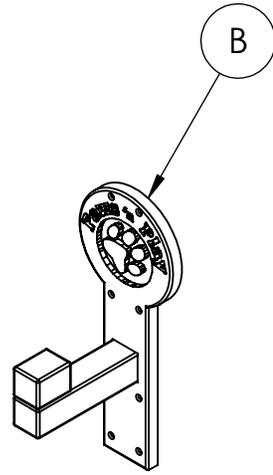


**2**  
LOGO BRACKET

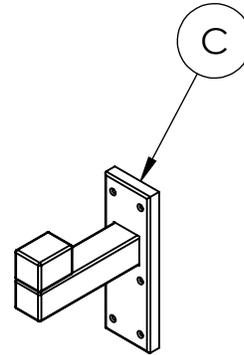

**2**  
FLAT BRACKET

**REQUIRED TOOLS  
(NOT INCLUDED)**  
- POWER DRILL  
- #2 SQUARE DRIVE

## HARDWARE



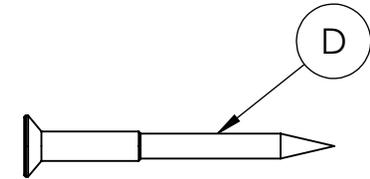


**28**  
#8 x 1.625"  
FLAT HEAD SCREW


**HARDWARE &  
TOOLS REQUIRED  
FOR ASSEMBLY**

**2/4**

# INSTRUCTIONS

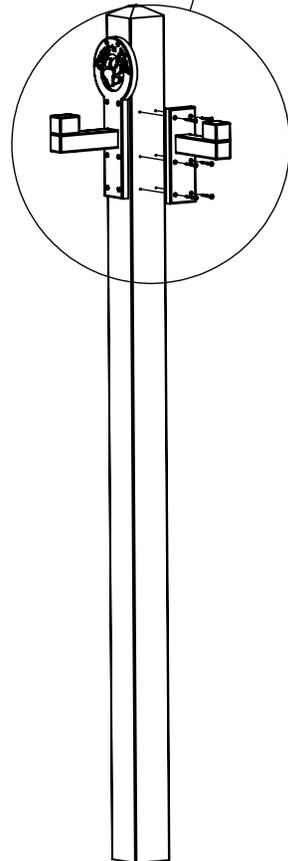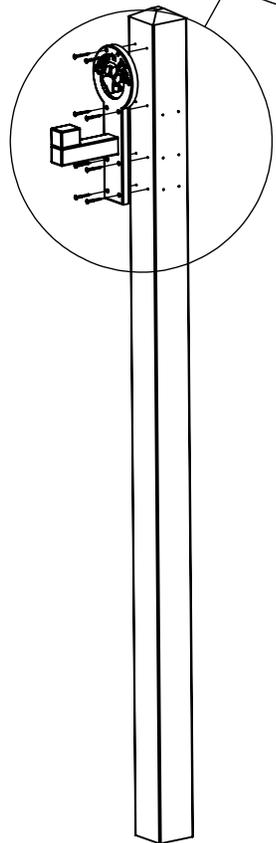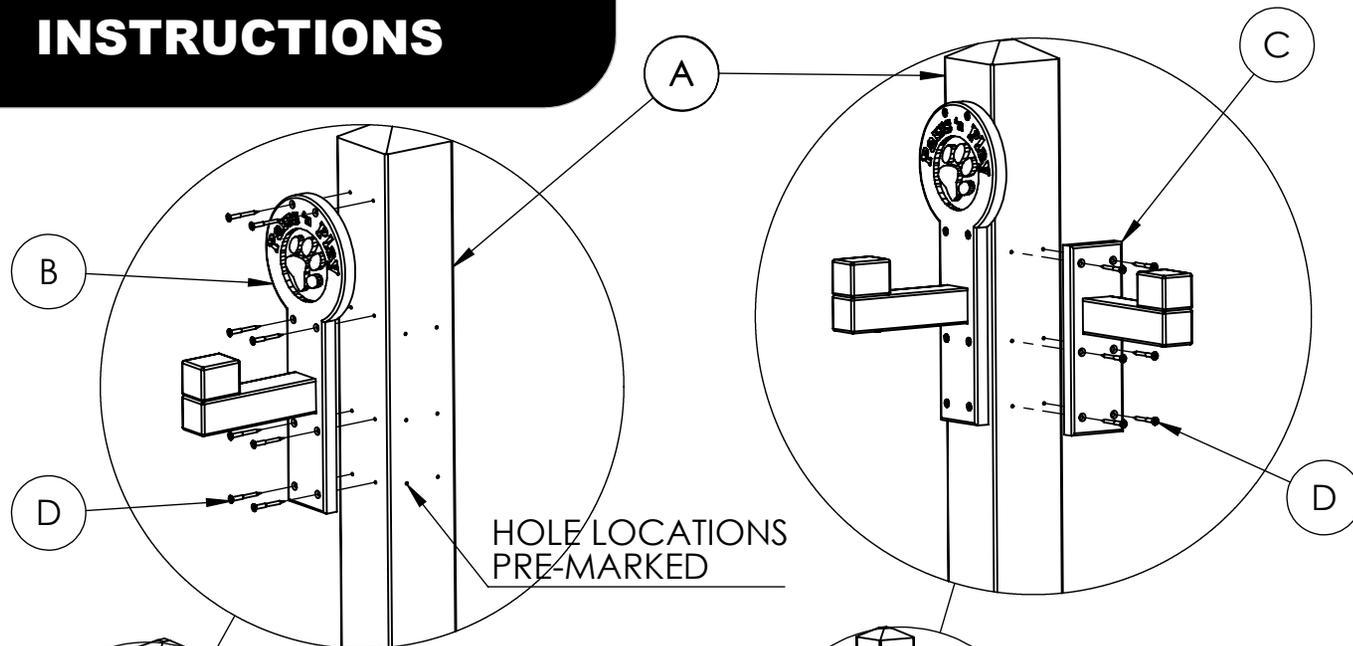

GROUND



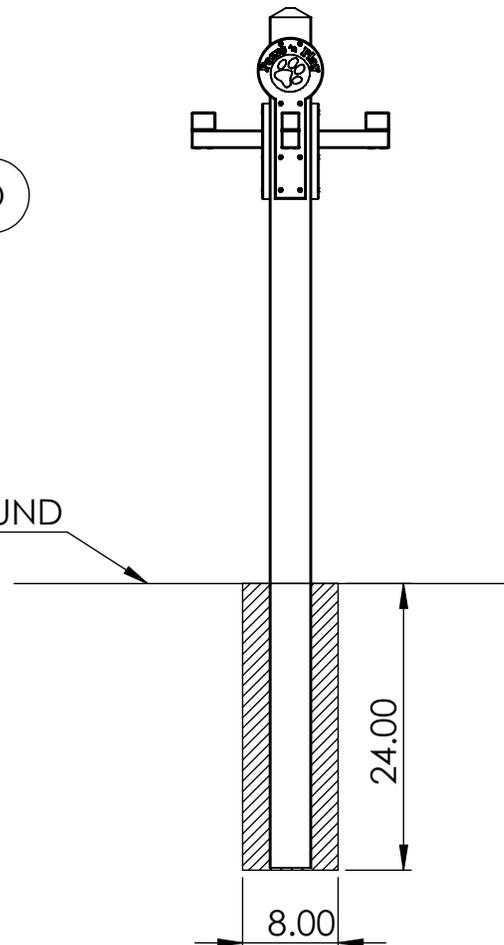


POST  
ASSEMBLY

3/4

# SPECIFICATIONS

ALL DIMENSIONS SHOWN IN INCHES

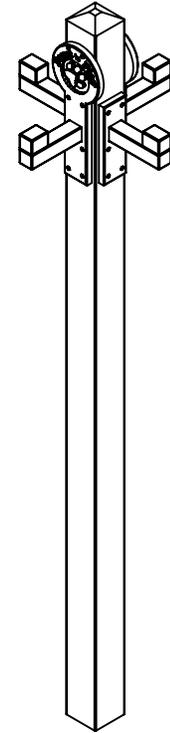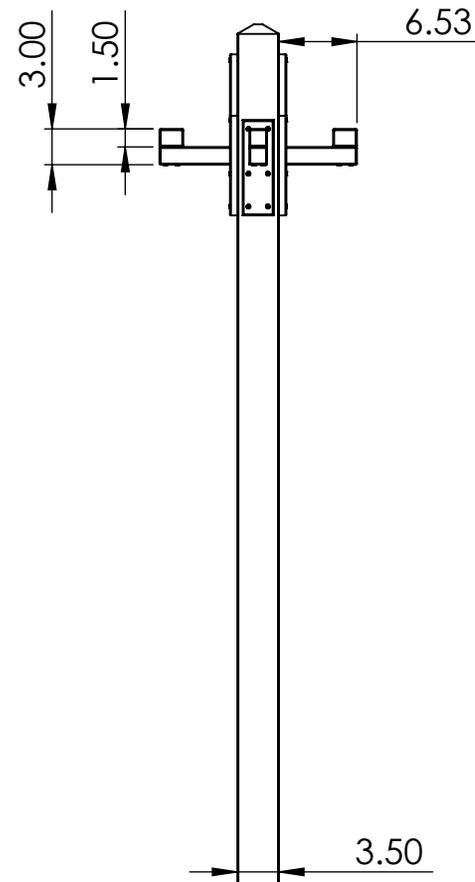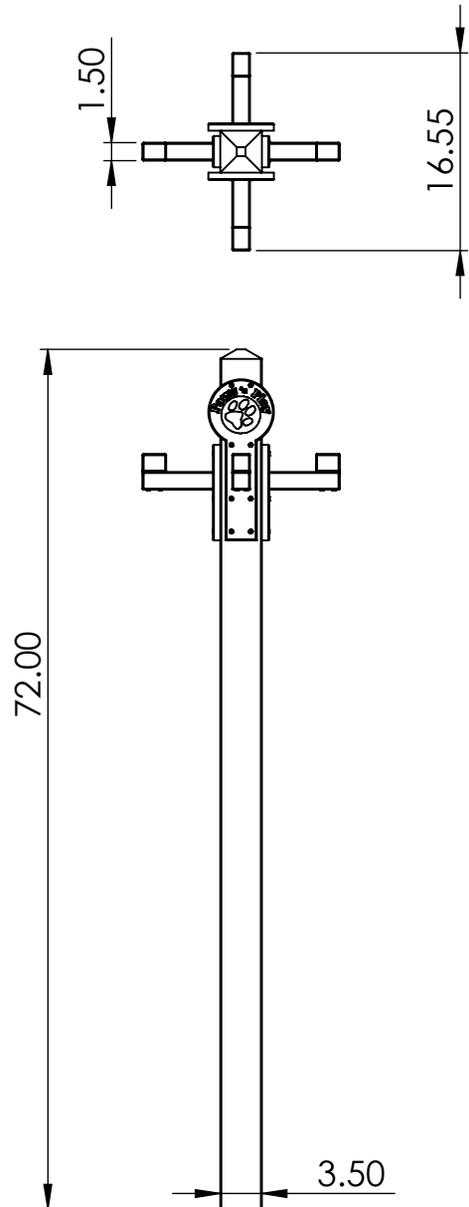

**CONSTRUCTION MATERIALS:**  
Recycled Plastic  
**HARDWARE:**  
Stainless Steel