


INSTRUCTIONS PW1215 - PW1220

REV# 1

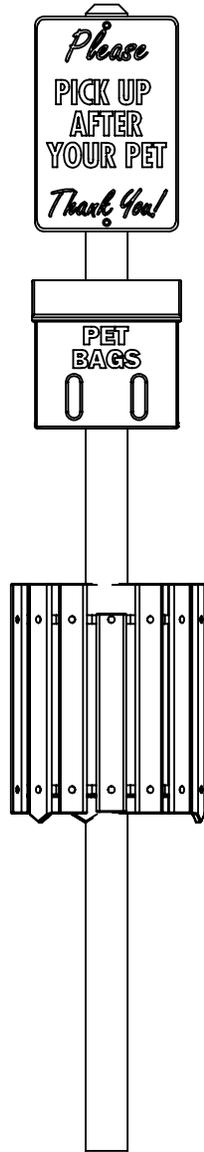


INGROUND MOUNT




SURFACE MOUNT


INSTRUCTIONS PW1215 - PW1220

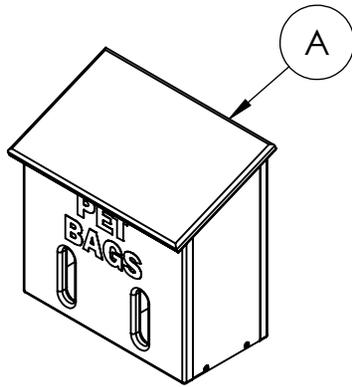


1
Pet Bags Dispenser

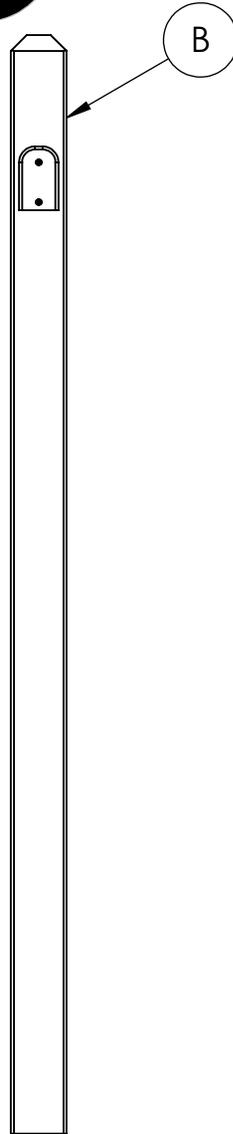


1
Inground Post

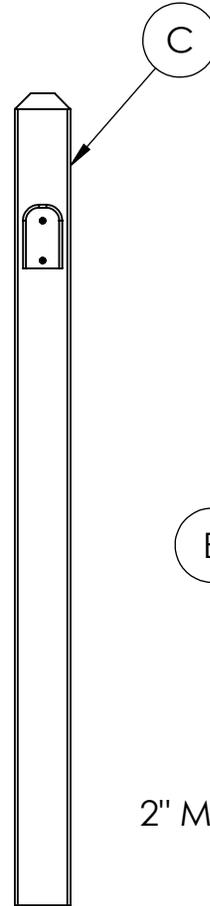

1
Surface Mount Post

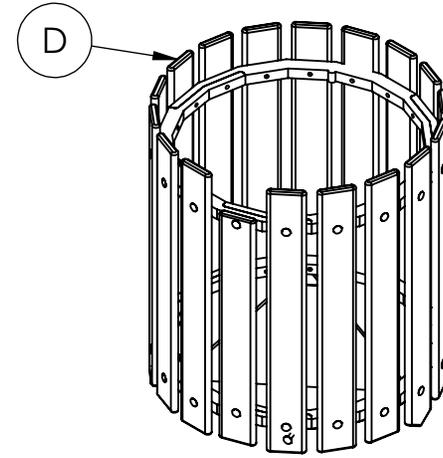

1
Receptacle

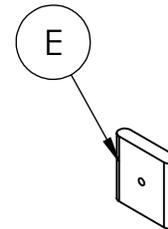

2
2" Mounting Bracket




1
SIGN

**REQUIRED TOOLS
(NOT INCLUDED)**
1 - 7/16" WRENCH
1 - #2 SQUARE BIT


**HARDWARE &
TOOLS REQUIRED
FOR ASSEMBLY**

2/7


INSTRUCTIONS PW1215 - PW1220

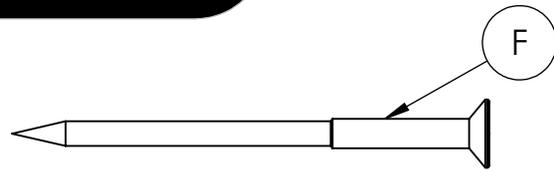


2
#10 x 2.5" Screw

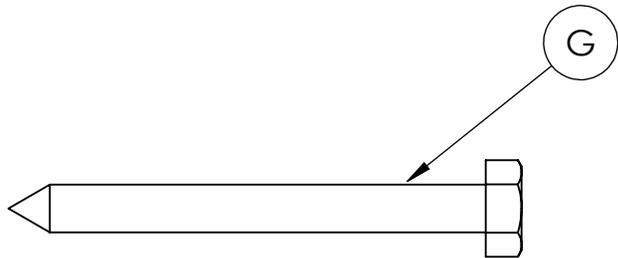


2
1/4" x 2.5" Lag Screw

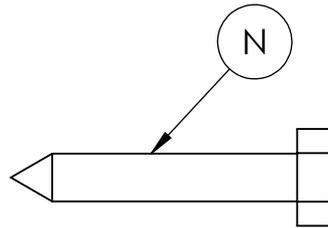

2
1/4" x 1.5" Lag Screw

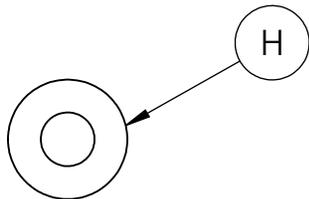


4
1/4" Flat Washer

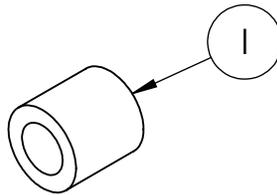


2
Mounting Spacer

**REQUIRED TOOLS
(NOT INCLUDED)**
1 - 7/16" WRENCH
1 - #2 SQUARE BIT


SURFACE MOUNT HARDWARE

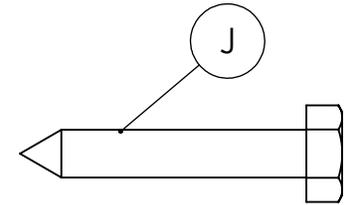

2
1/4" x 1.5" Lag Screw

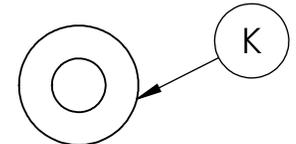

2
1/4" Flat Washer

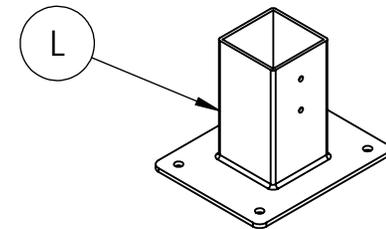

1
Surface Mount Base

**HARDWARE &
TOOLS REQUIRED
FOR ASSEMBLY**


3/7

INSTRUCTIONS

PW1215 - PW1220


Inground Mount

- Dig a hole 12 inches in diameter to a depth of 18 inches
- Insert the inground mount (B) post into the hole
- Level the post with the ground
- Pour concrete into the hole and allow to set

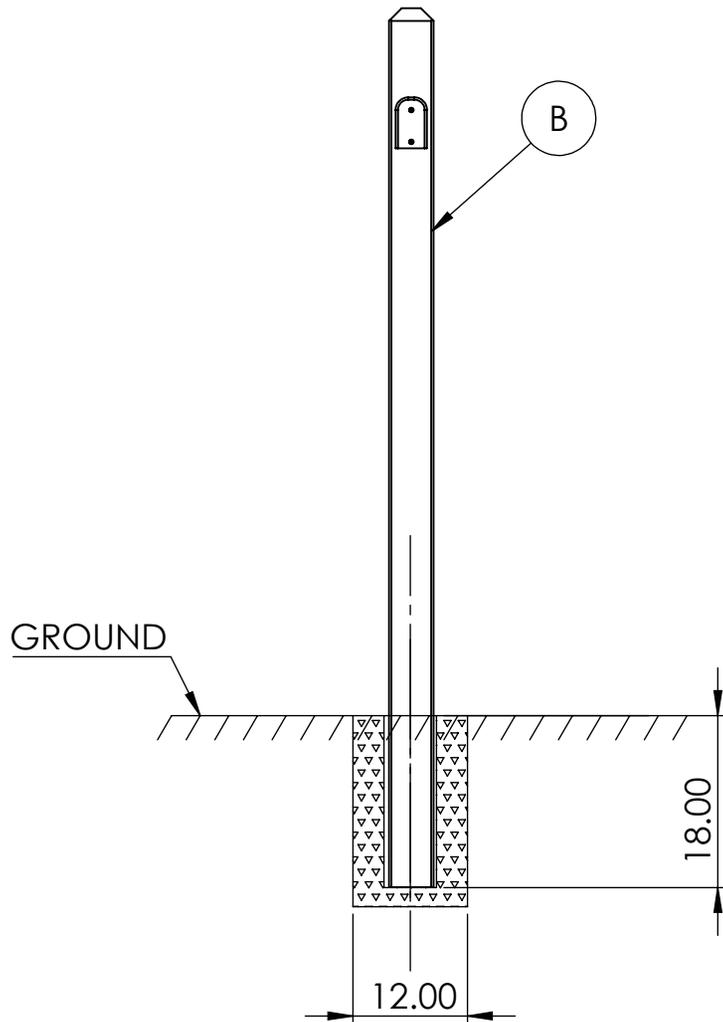

Surface Mount


- Insert the post (C) into the surface mount base (L)
- Secure the post to the base with 2 1/4" x 1.5" lag screws (J) and washers (K) provided
- Place the post upright in desired location
- Square the post assembly to the ground
- Attach the surface mount base to the ground using appropriate hardware (not included)

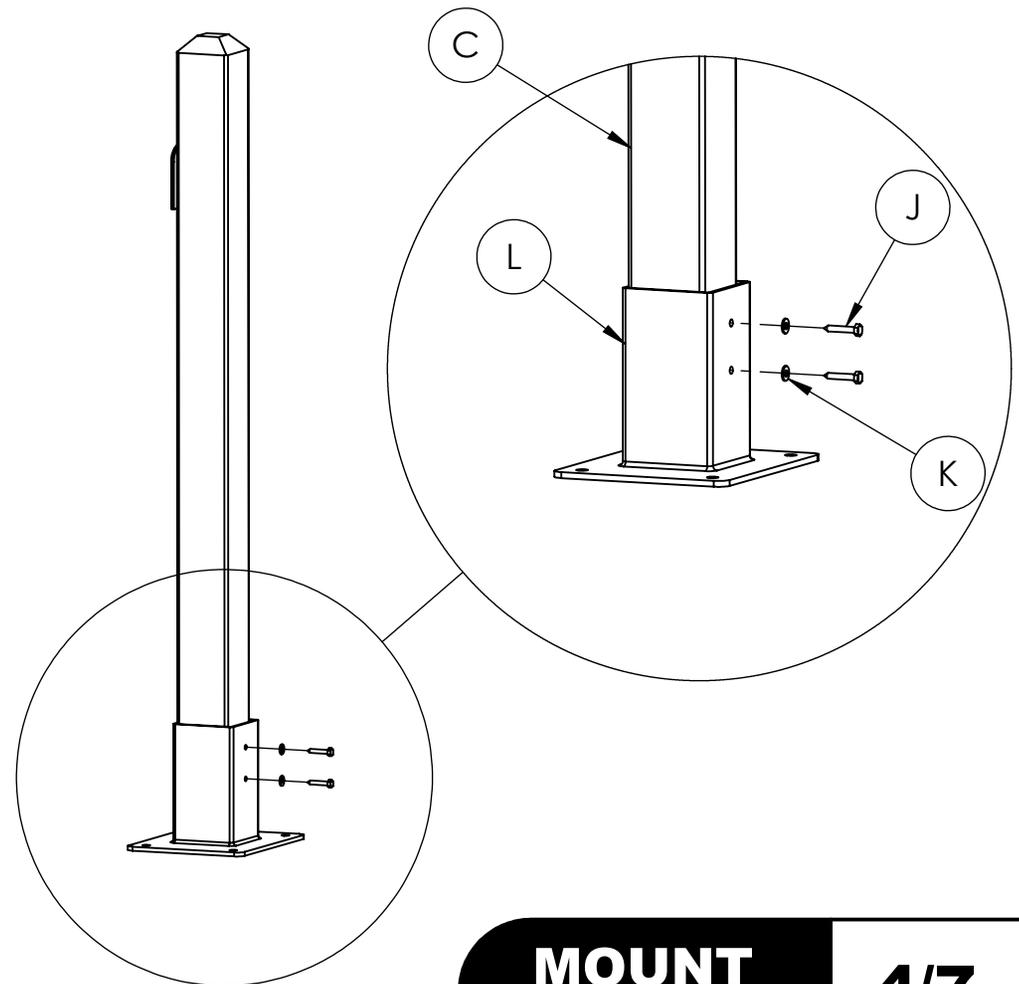

INSTRUCTIONS PW1215 - PW1220

MOUNT THE DISPENSER

- Slide the pet bags dispenser (A) onto the post
- Install the #10 x 2.5" screw (F) to secure the dispenser to the post
- (Only 1 is needed but 2 are supplied in case of stripping)
- Remove bags from box and pull through slot


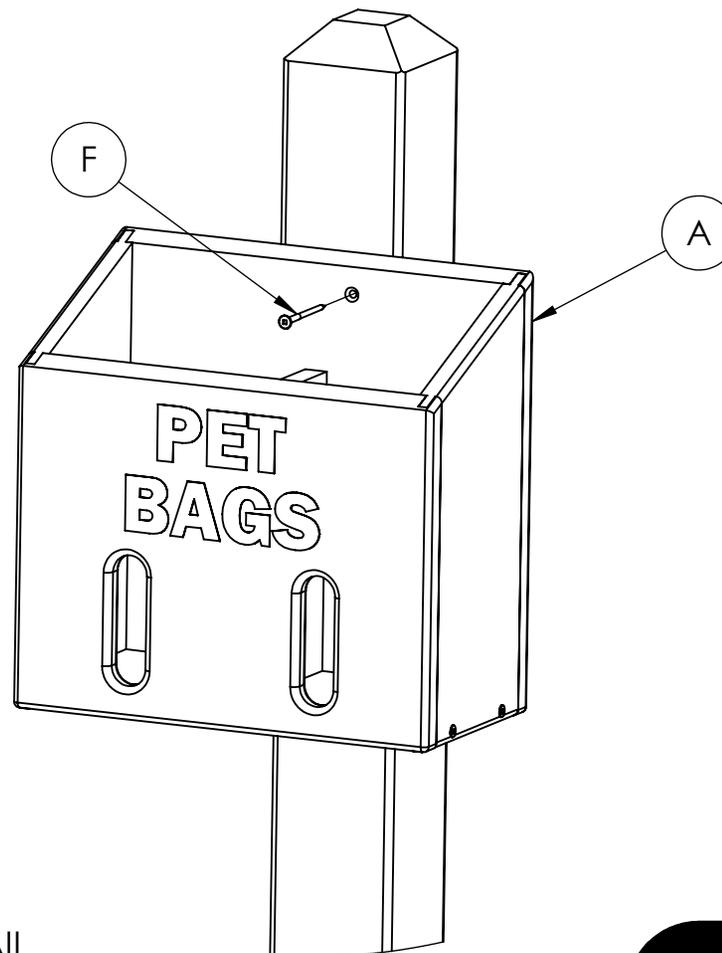


NOTE: LID REMOVED TO SHOW DETAIL

INSTRUCTIONS PW1215 - PW1220

Mount the Receptacle


- Place the receptacle on the ground in front of the post with the short slat in the front
- Mark the post 1.5" below the top ring
- INGROUND MOUNT: Mark the post 1.5" above the bottom ring
- SURFACE MOUNT: Mark the post 6" above the bottom ring
- Drill 1/8" pilot holes at your marks 1" to 2" deep
- Install both mounting brackets in the pilot holes per Figure 1
- Use a 7/16 wrench to tighten

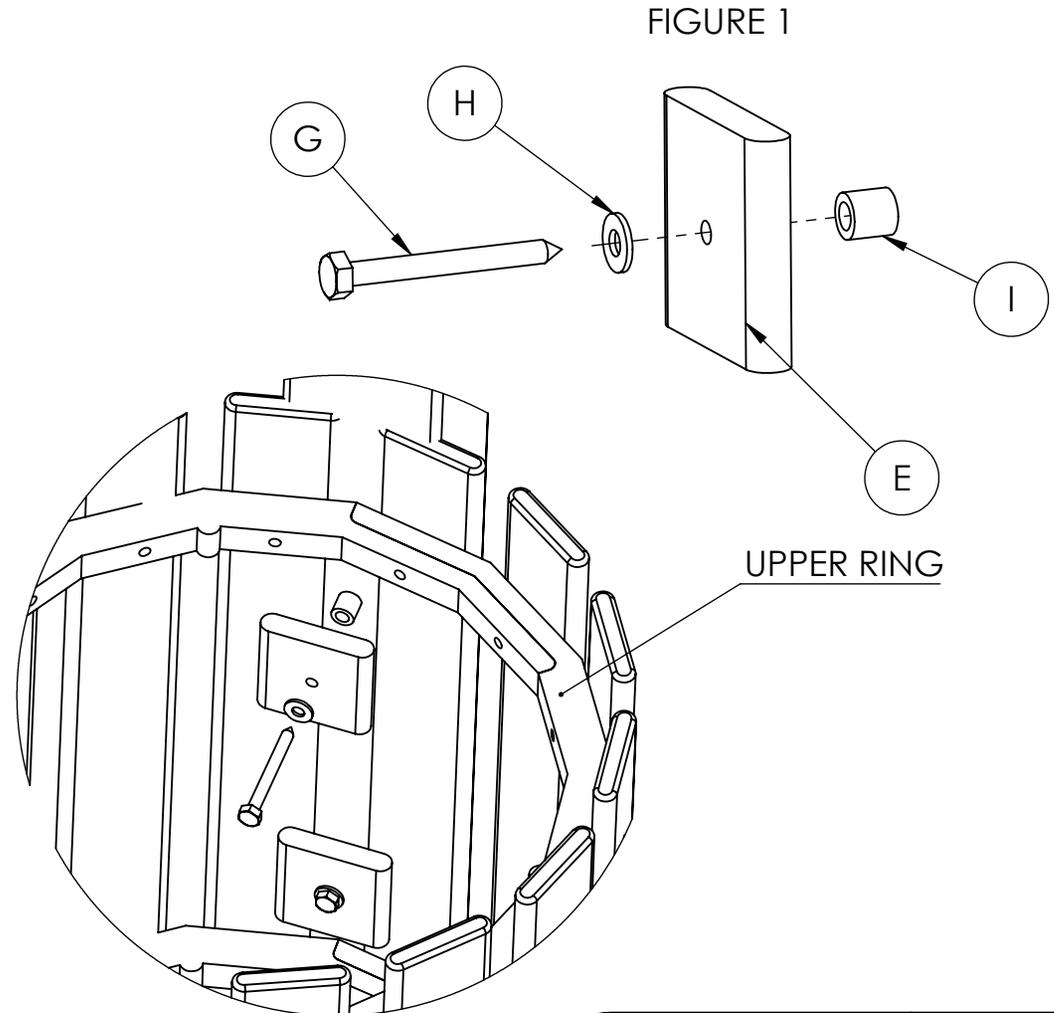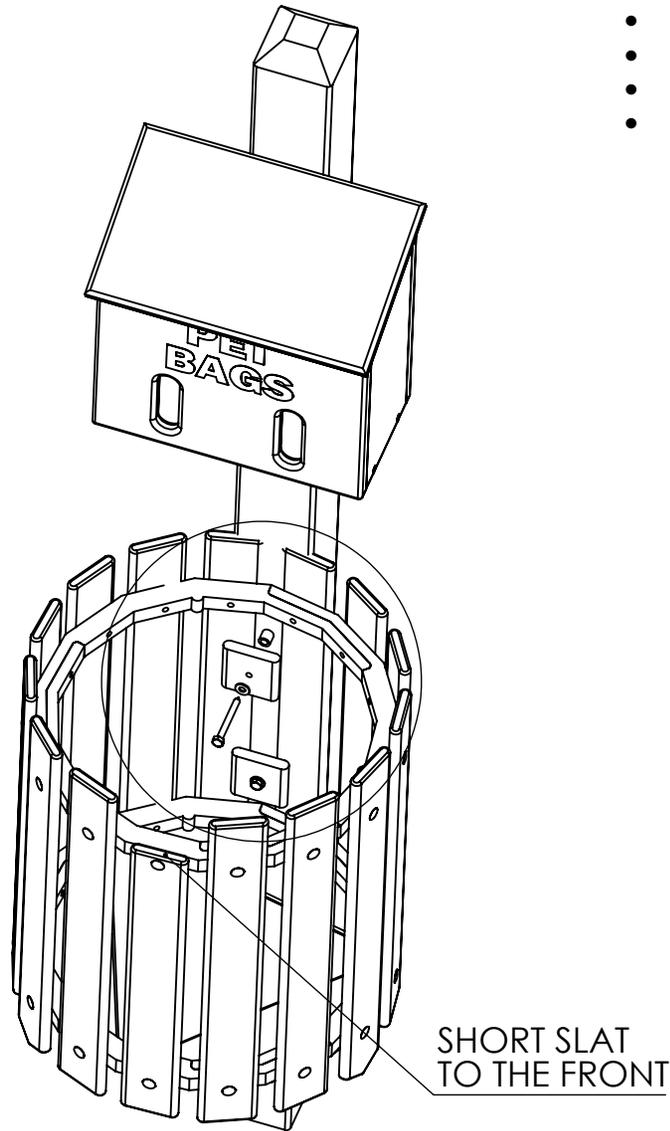

INSTRUCTIONS PW1215 - PW1220

Attach the Sign

- Locate the predrilled holes towards the top of the post
- Align the predrilled holes with the holes in the sign
- Secure the sign with 1/4 x 1.5" lag screws (N) and flat washers (H)

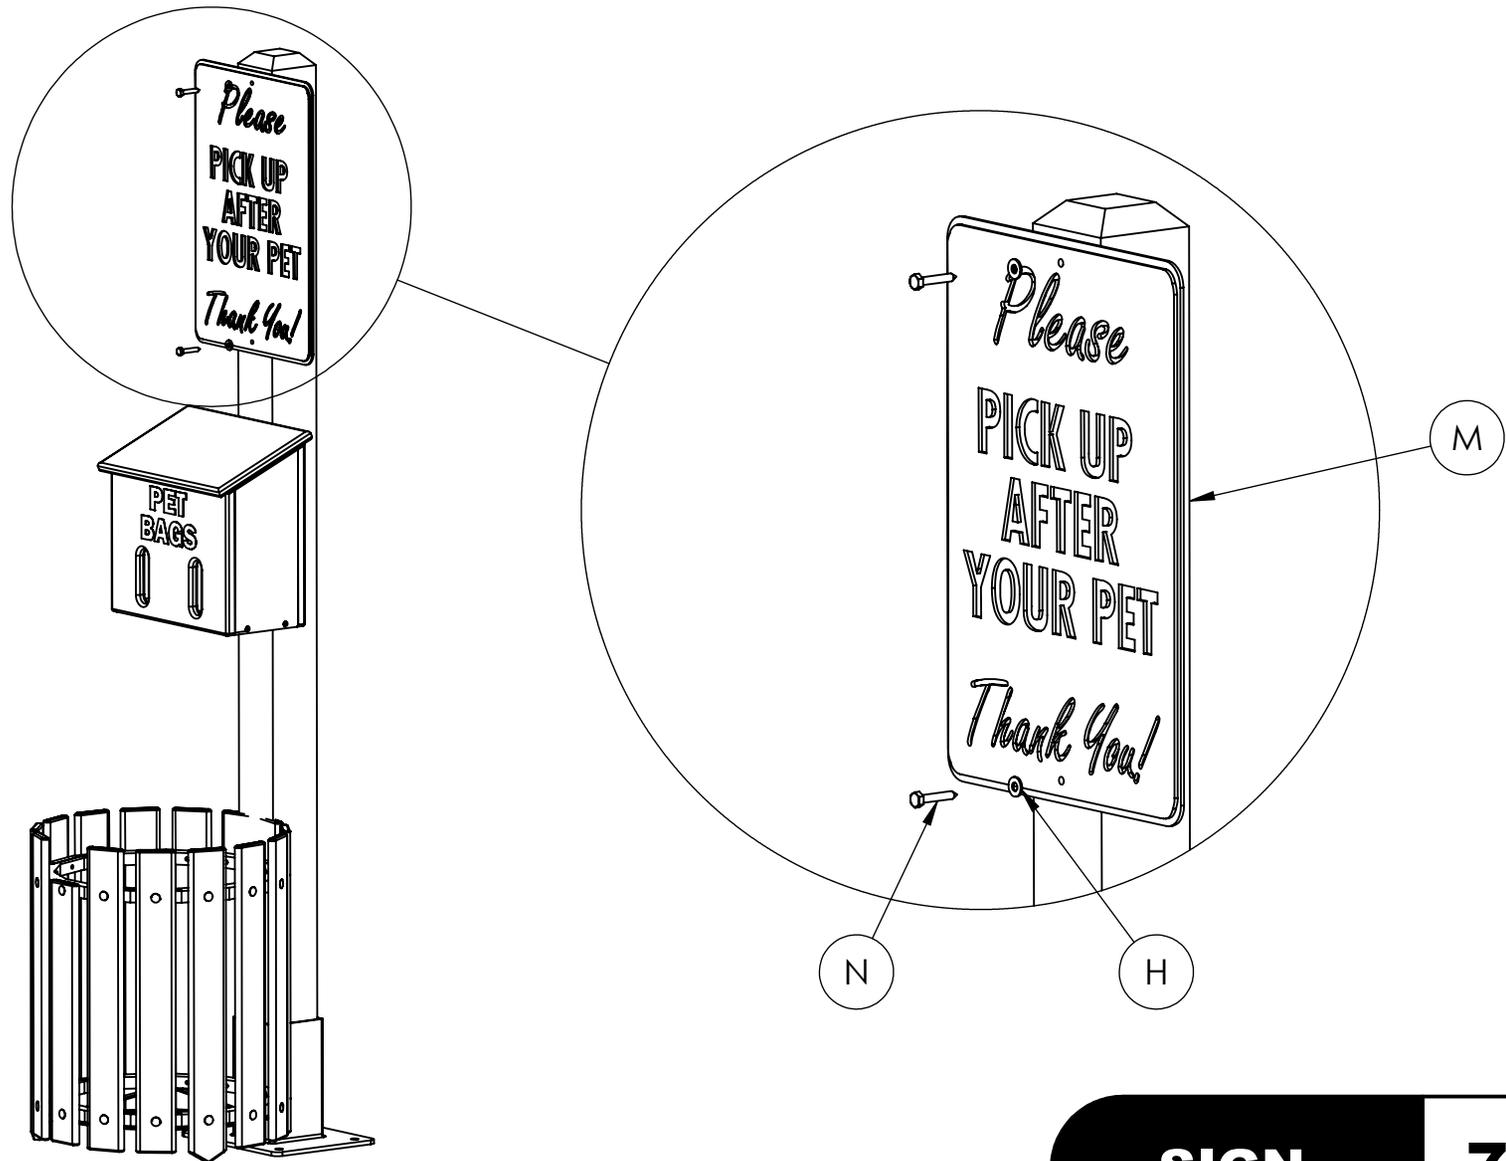

PW1215-PW1220 5 GALLON

NOTE: ALL MATERIAL IS RECYCLED PLASTIC LUMBER UNLESS NOTED
ALL DIMENSIONS SHOWN IN INCHES

