



# INSTRUCTIONS PW1465-PW1470

REV# 1

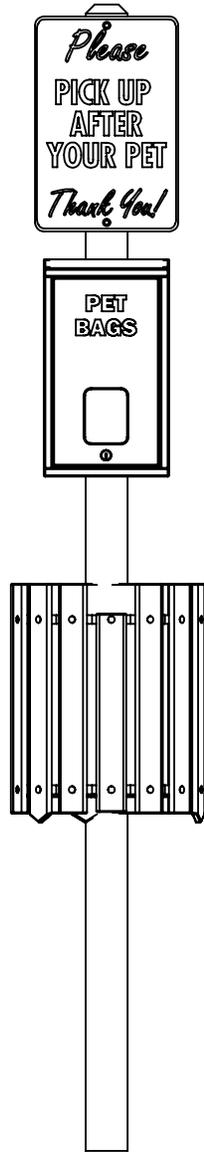


INGROUND MOUNT

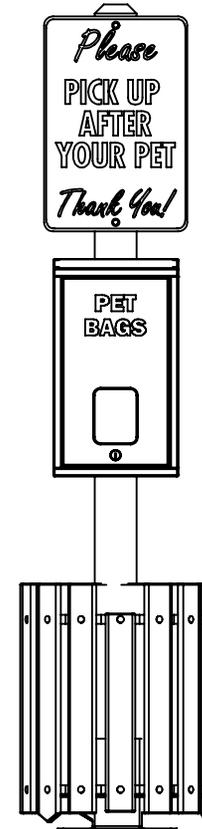


SURFACE MOUNT

# INSTRUCTIONS PW1465-PW1470

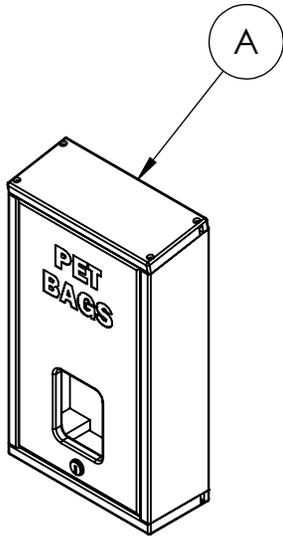


**1**  
Pet Bags Dispenser

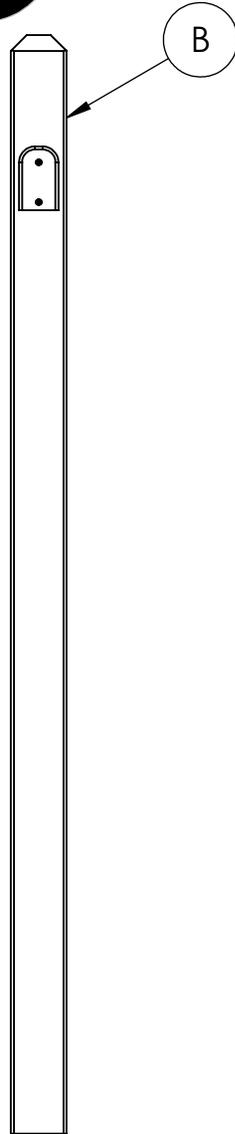


**1**  
Inground Post


**OR**

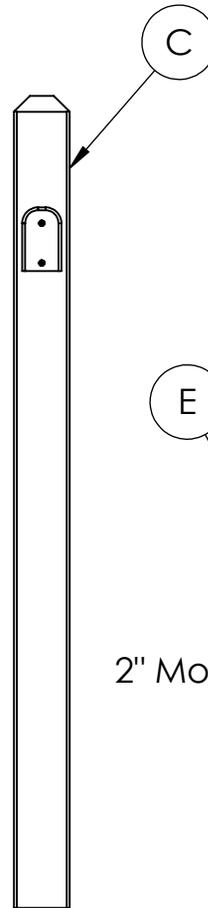

**1**  
Surface Mount Post

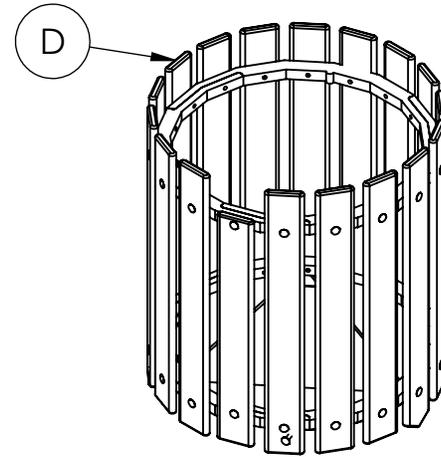

**1**  
Receptacle

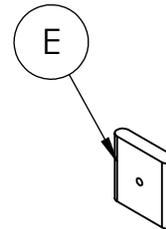

**2**  
2" Mounting Bracket




**1**  
SIGN

**HARDWARE &  
TOOLS REQUIRED  
FOR ASSEMBLY**


**2/7**

# INSTRUCTIONS


## PW1465-PW1470

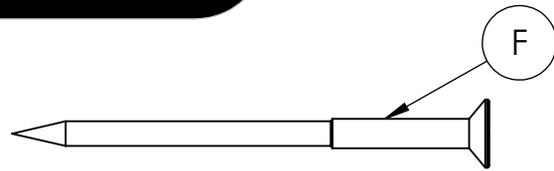


**2**  
#10 x 2.5" Screw

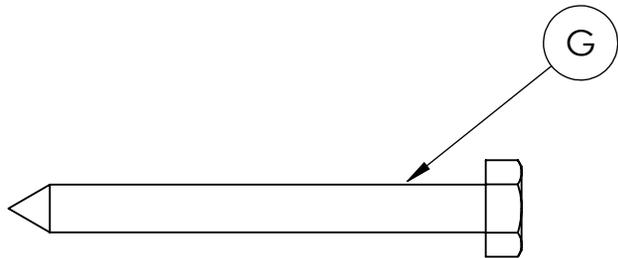


**2**  
1/4" x 2.5" Lag Screw

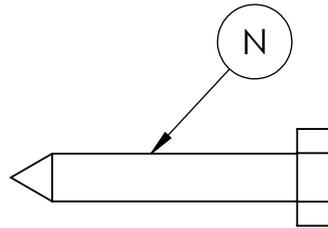

**2**  
1/4" x 1.5" Lag Screw

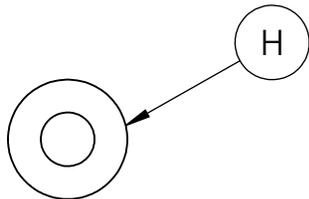

**4**  
1/4" Flat Washer

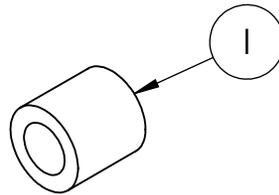


**2**  
Mounting Spacer


### REQUIRED TOOLS (NOT INCLUDED)

- 1 - 7/16" WRENCH
- 1 - #2 SQUARE BIT


### SURFACE MOUNT HARDWARE

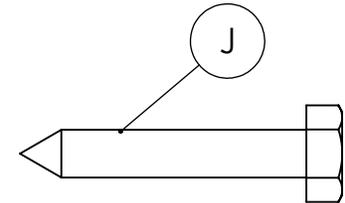

**2**  
1/4" x 1.5" Lag Screw

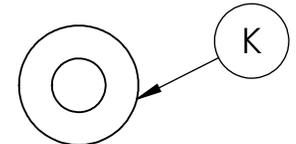

**2**  
1/4" Flat Washer

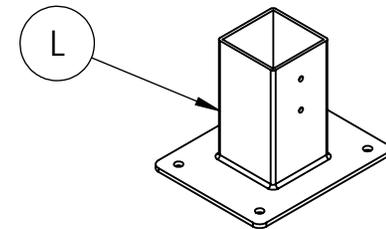

**1**  
Surface Mount Base

**HARDWARE &  
TOOLS REQUIRED  
FOR ASSEMBLY**


**3/7**

# INSTRUCTIONS

## PW1465-PW1470


### Inground Mount

- Dig a hole 12 inches in diameter to a depth of 18 inches
- Insert the inground mount (B) post into the hole
- Level the post with the ground
- Pour concrete into the hole and allow to set

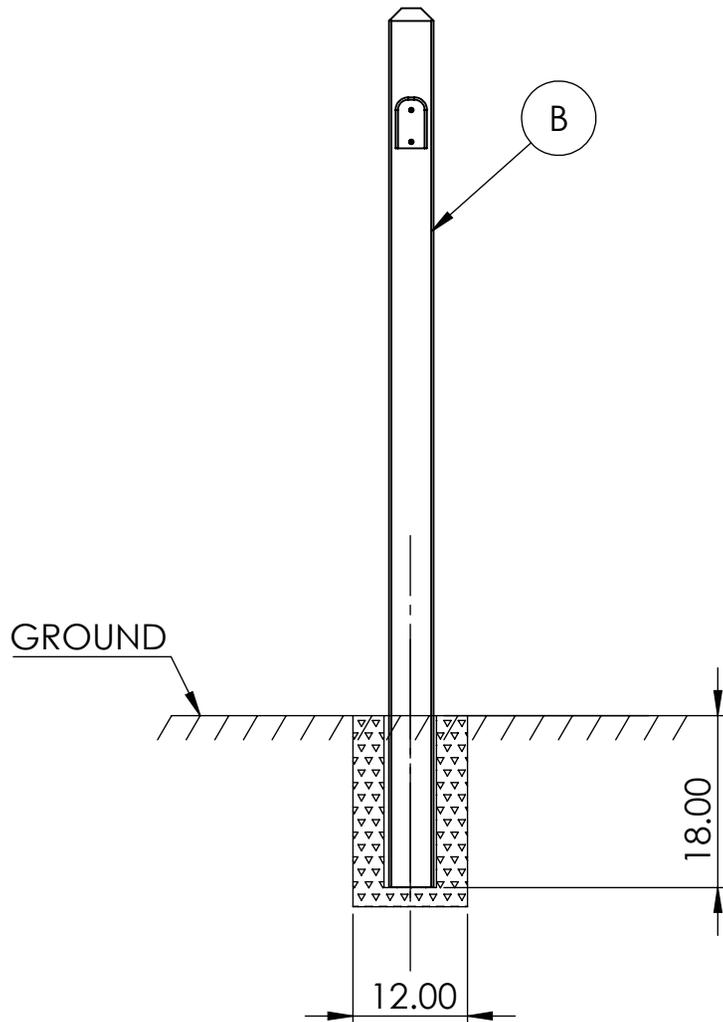

### Surface Mount

- Insert the post (C) into the surface mount base (L)
- Secure the post to the base with 2 1/4" x 1.5" lag screws (J) and washers (K) provided
- Place the post upright in desired location
- Square the post assembly to the ground
- Attach the surface mount base to the ground using appropriate hardware (not included)

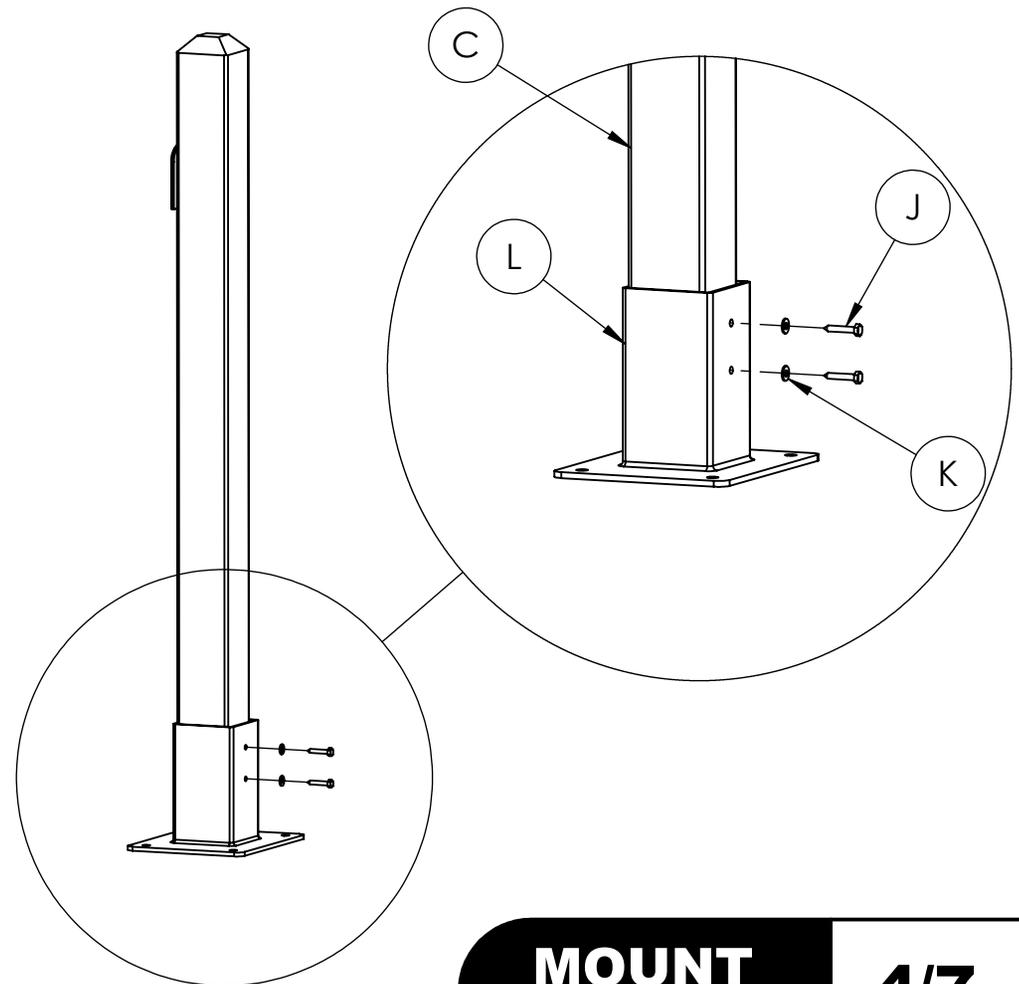

**MOUNT  
POST**


**4/7**

# INSTRUCTIONS

## PW1465-PW1470

### MOUNT THE DISPENSER

- Slide the pet bags dispenser (A) onto the post
- Install the #10 x 2.5" screw (F) to secure the dispenser to the post (Only 1 is needed but 2 are supplied in case of stripping)


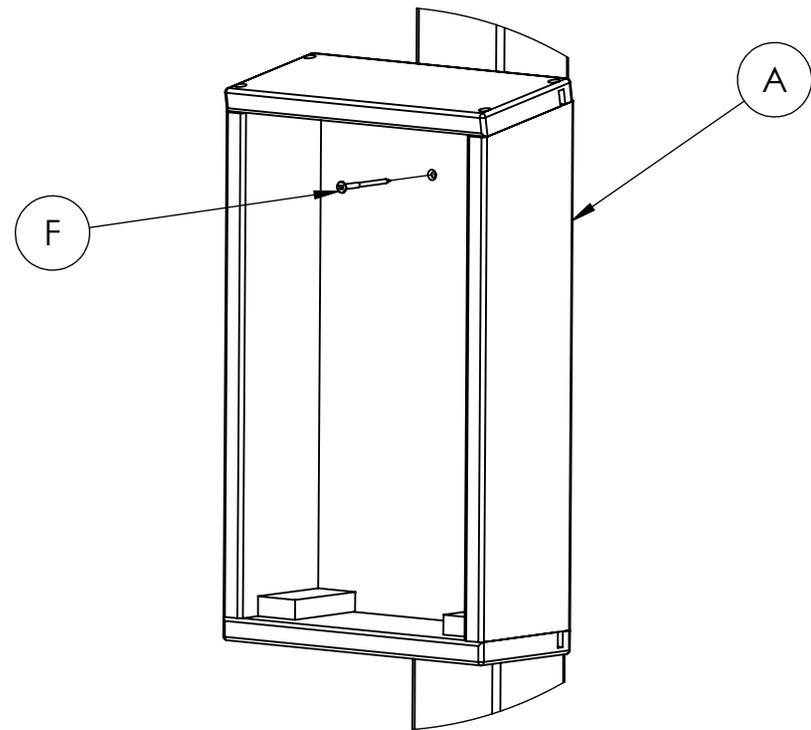


**NOTE: LID REMOVED TO SHOW DETAIL**

# INSTRUCTIONS PW1465-PW1470

## Mount the Receptacle

- Place the receptacle on the ground in front of the post with the short slat in the front
- Mark the post 1.5" below the top ring
- INGROUND MOUNT: Mark the post 1.5" above the bottom ring
- SURFACE MOUNT: Mark the post 6" above the bottom ring
- Drill 1/8" pilot holes at your marks 1" to 2" deep
- Install both mounting brackets in the pilot holes per Figure 1
- Use a 7/16 wrench to tighten

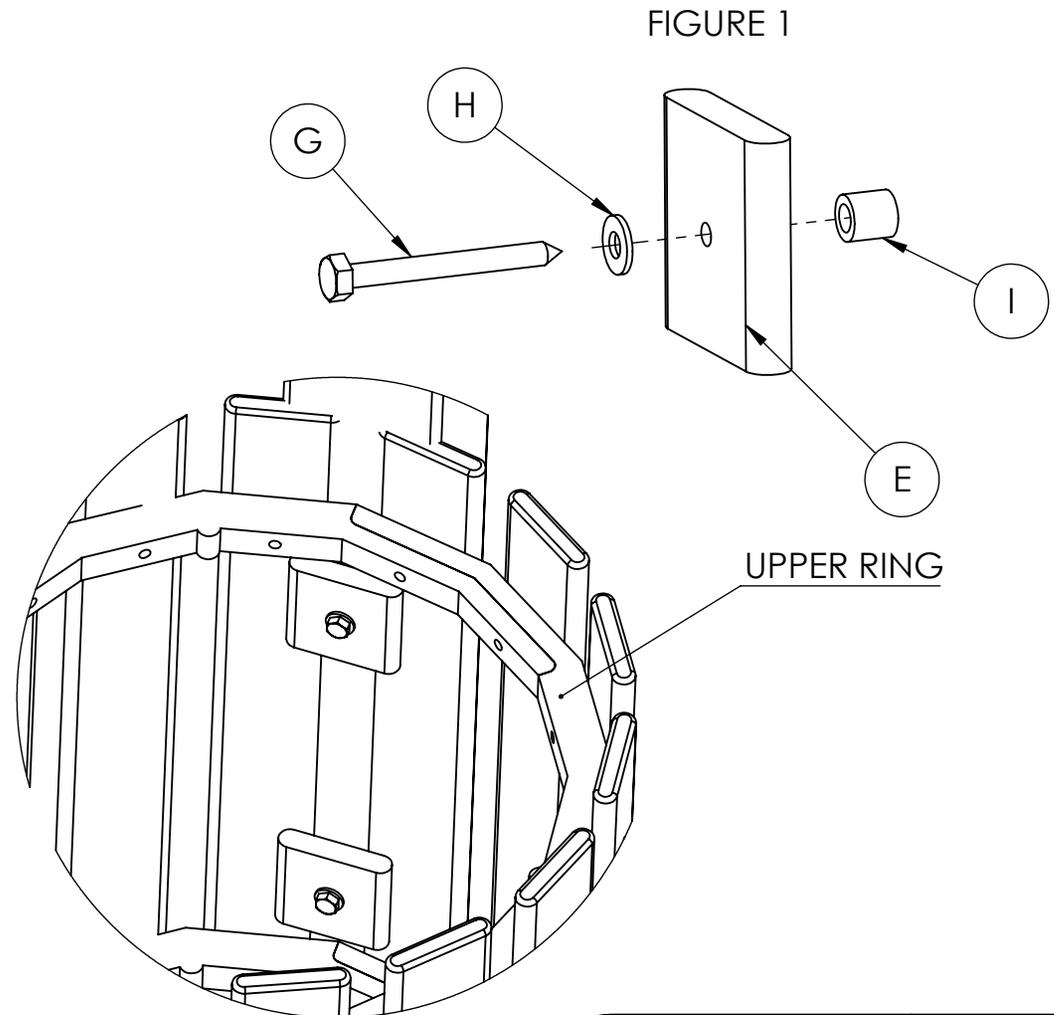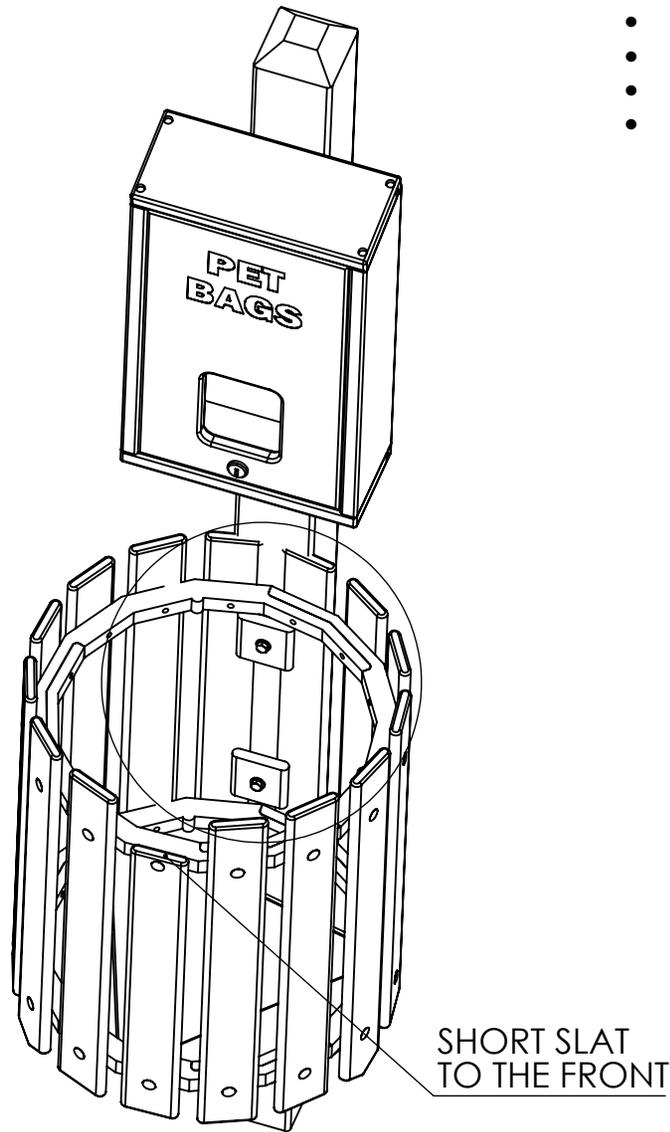


# INSTRUCTIONS

## PW1465-PW1470

### Attach the Sign

- Locate the predrilled holes towards the top of the post
- Align the predrilled holes with the holes in the sign
- Secure the sign (M) with 1/4 x 1.5" lag screws (N) and flat washers (H)

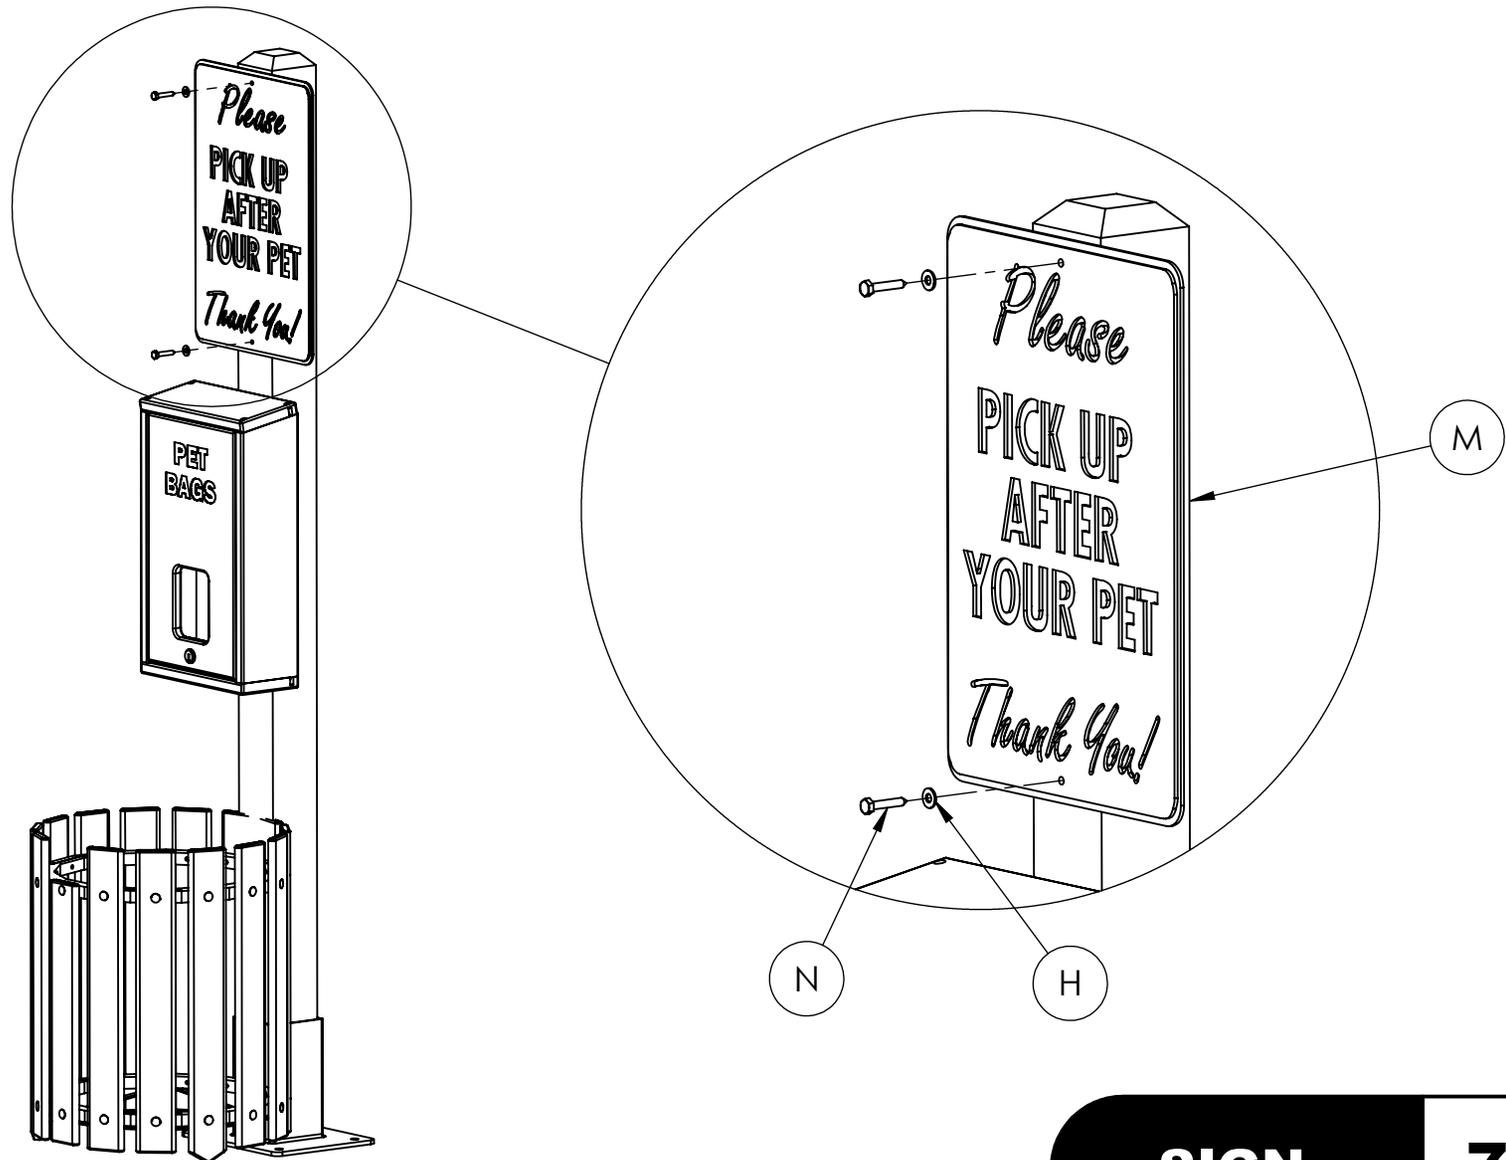

# PW1465-PW1470

NOTE: ALL MATERIAL IS RECYCLED PLASTIC LUMBER UNLESS NOTED  
ALL DIMENSIONS SHOWN IN INCHES

