


BENCH INSTRUCTIONS






BM1100 & BM120

REV# 2
6/2/23

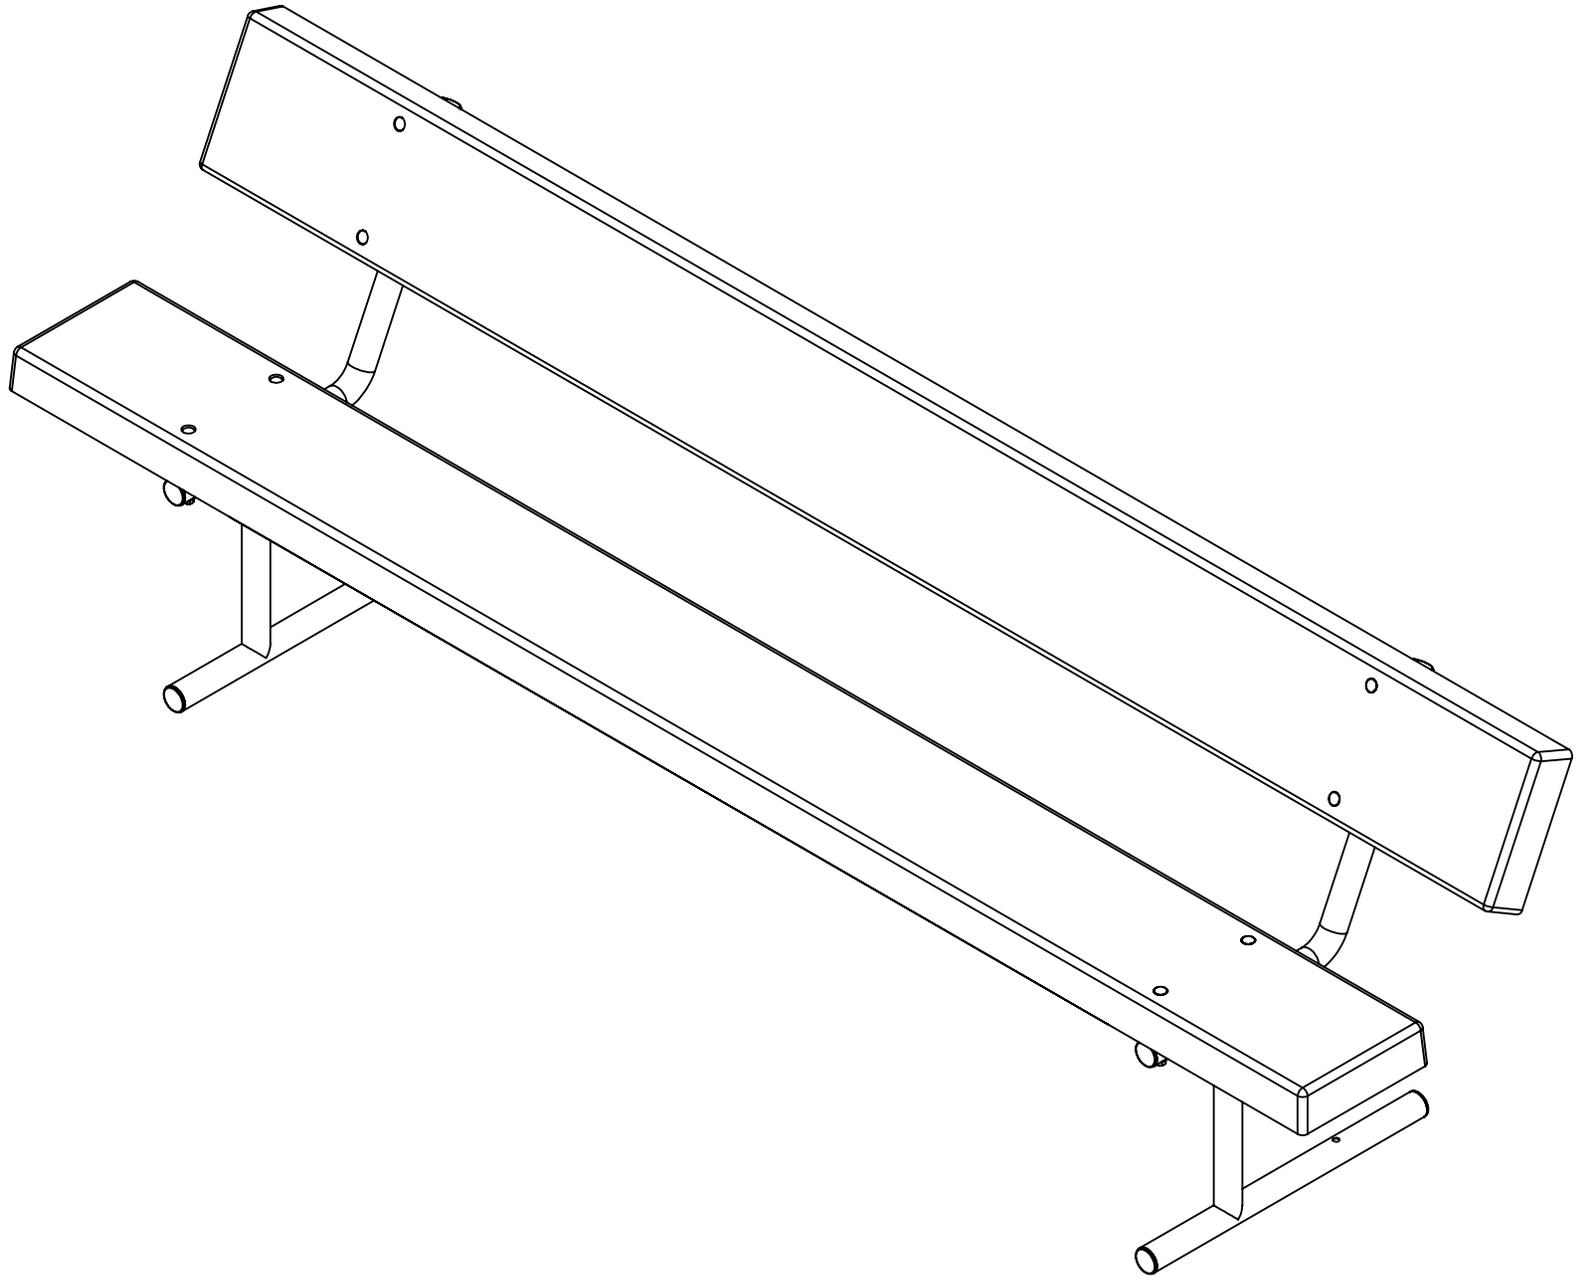

BENCH INSTRUCTIONS BM1100 & BM1120

NOTE: IT IS IMPORTANT TO KEEP ALL BOLTS FINGER TIGHT DURING ASSEMBLY UNTIL ENTIRE TABLE IS ASSEMBLED

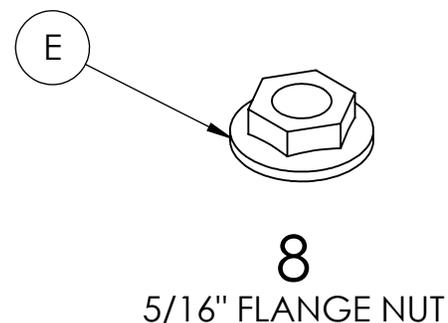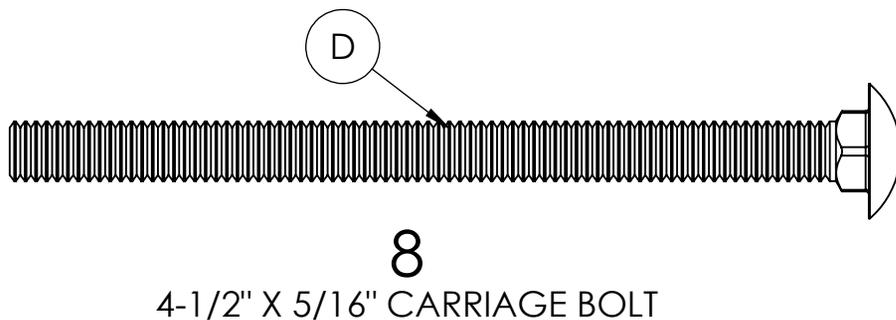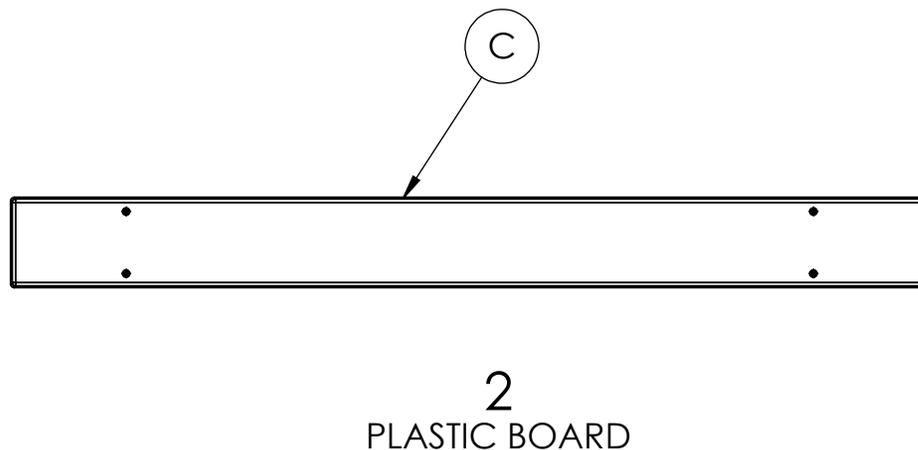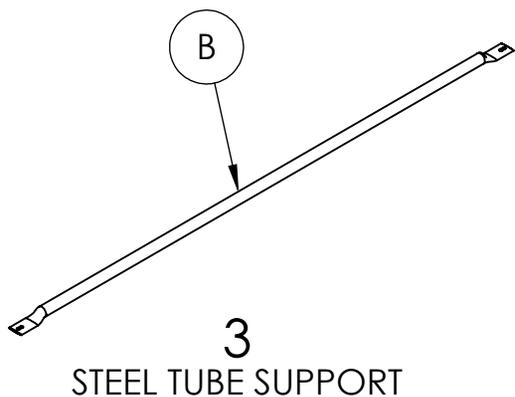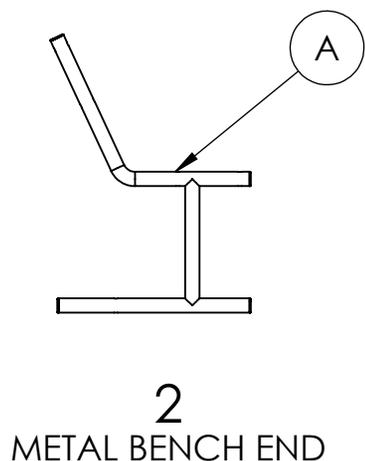

REQUIRED TOOLS (NOT INCLUDED)

- 1 - 1/2" WRENCH
- 1 - 1/2" SOCKET

**NOTE: BENCHES MAY
INCLUDE EXTRA HARDWARE**

**HARDWARE &
TOOLS REQUIRED
FOR ASSEMBLY**


2/3

BENCH INSTRUCTIONS

BM1100 & BM120



STEP 1 Seat Assembly

- Attach board (C) to steel bench end (A) using two 4-1/2"x 5/16" carriage bolts (D)
- Place bolt through board (C), support tube (B), and steel bench end (A)
- Hand tighten with 5/16" flange nut (E)
- Repeat on opposite steel bench end

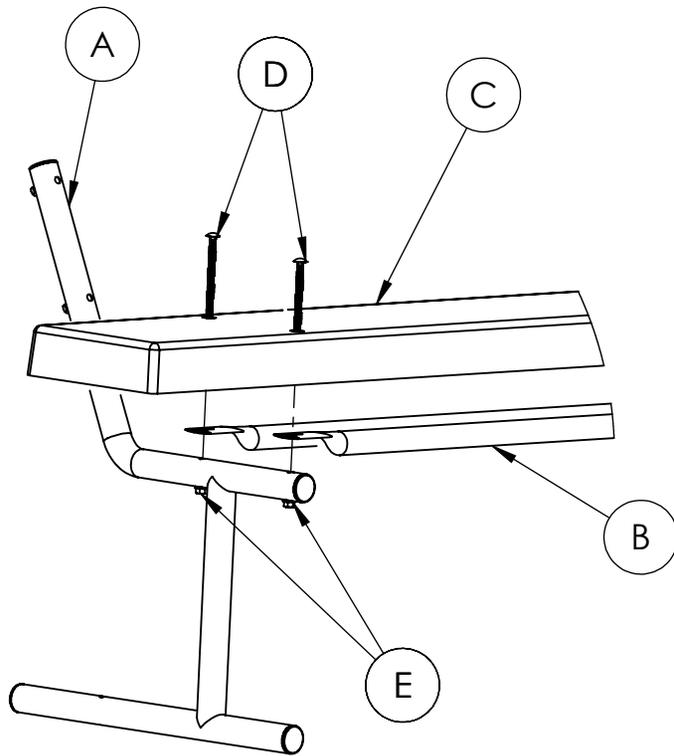


STEP 2 Attach the Backrest

- In the lower hole, insert a 4-1/2"x 5/16" carriage bolt (D) through the board (C), steel support tube (B), and the steel bench end (A)
- Attach with 5/16" flange nut (E)
- Repeat this procedure on the lower hole in the opposite steel bench end (A)
- In the upper hole, insert a 4-1/2" x 5/16" carriage bolt (D) through the plastic board (C) and the steel bench end (A)
- Attach with a 5/16" flange nut (E)
- Square all parts and tighten all hardware

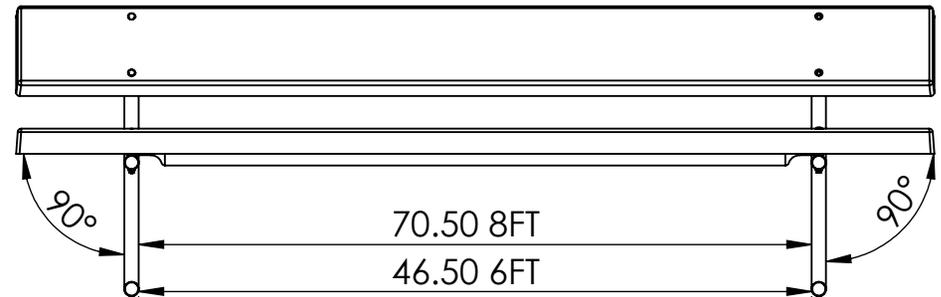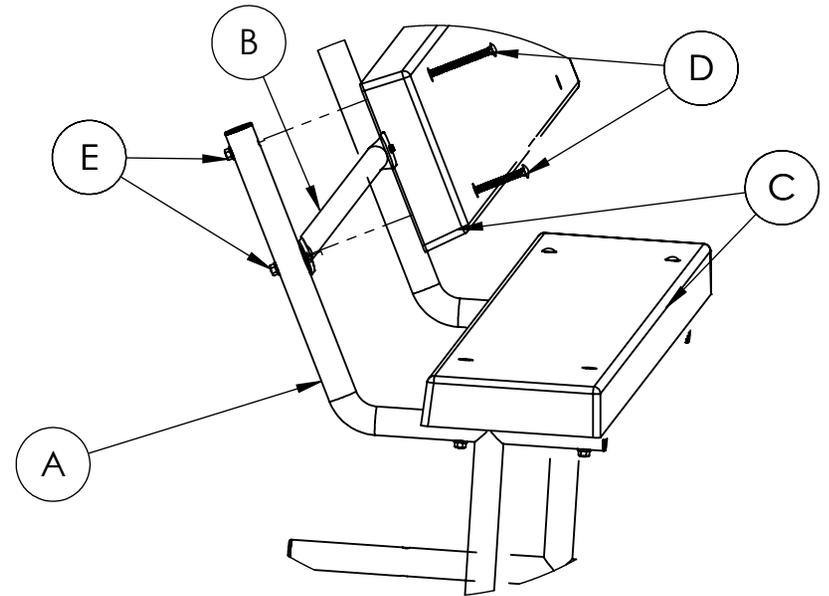


BENCH INSTRUCTIONS BM1100 & BM1120

ALL DIMENSIONS ARE SHOWN IN INCHES

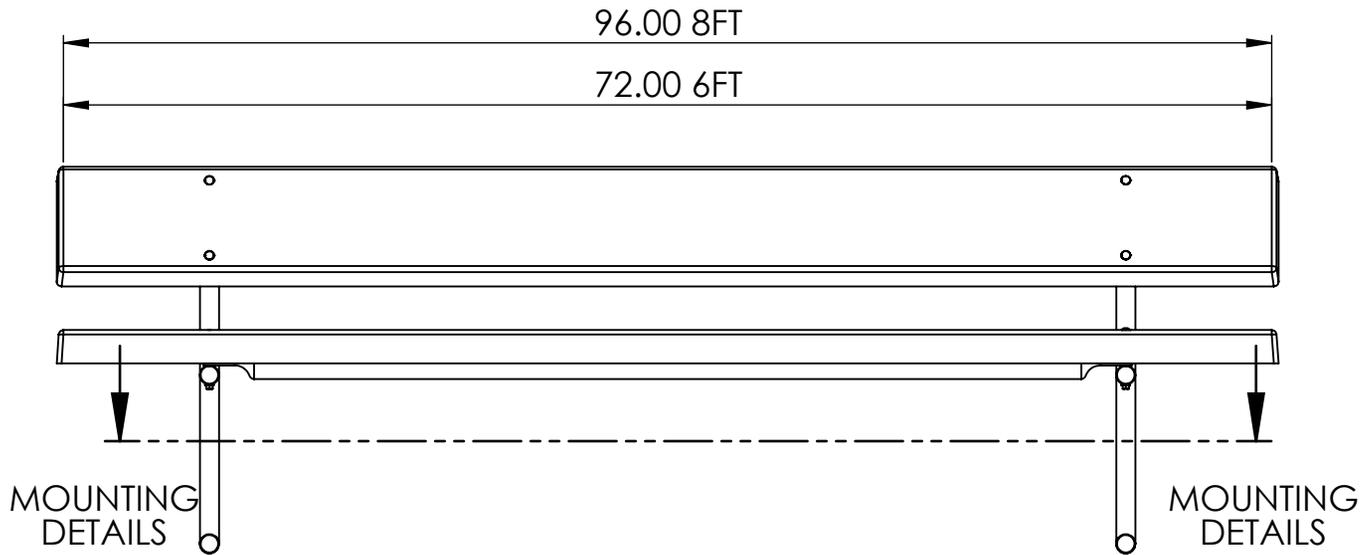


FRONT

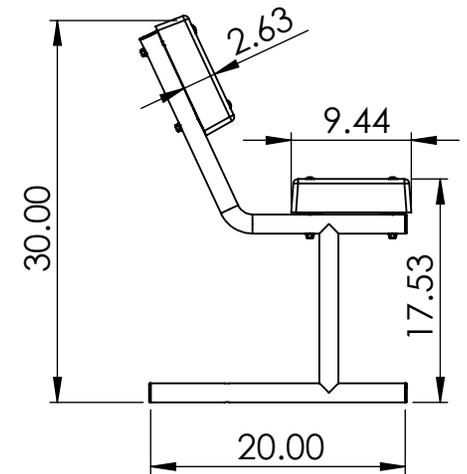

SIDE

MOUNTING DETAILS

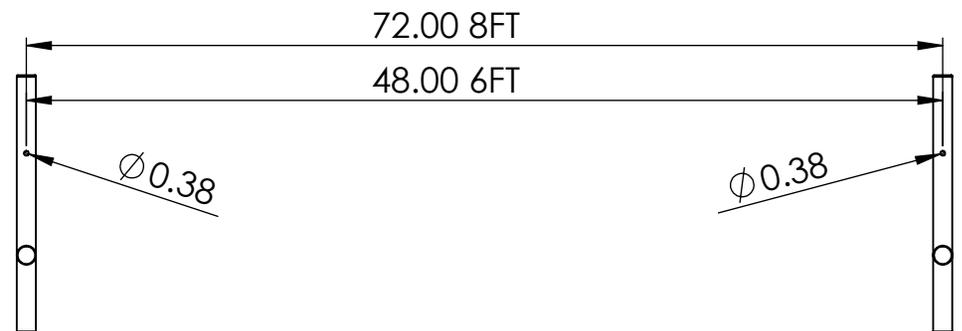

CONSTRUCTION MATERIALS:
FRAME - 1.50" OD STEEL TUBE
SEAT SUPPORT - 1.25" OD STEEL TUBE
SEAT & BACK - PLASTIC
HARDWARE:
STAINLESS STEEL