


BENCH INSTRUCTIONS

CF1000 REV# 1



BENCH INSTRUCTIONS

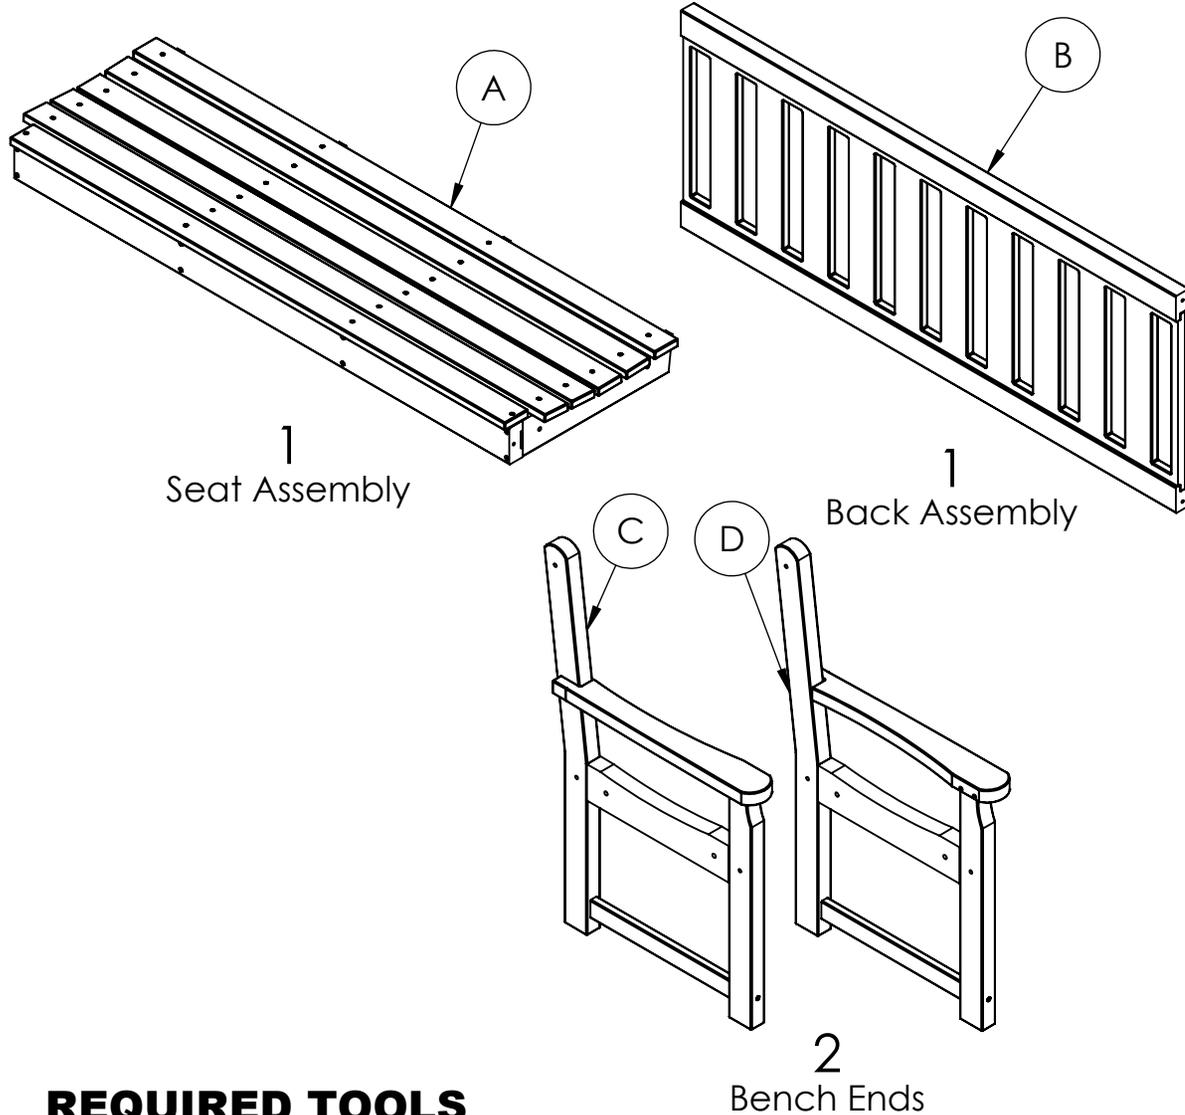


REQUIRED TOOLS (NOT INCLUDED)

- POWER DRILL
- 7/32 ALLEN WRENCH
- 9/16 WRENCH
- T30 TORX BIT


NOTE: IT IS IMPORTANT TO KEEP ALL SCREWS LOOSE DURING ASSEMBLY UNTIL ENTIRE BENCH IS ASSEMBLED

HARDWARE

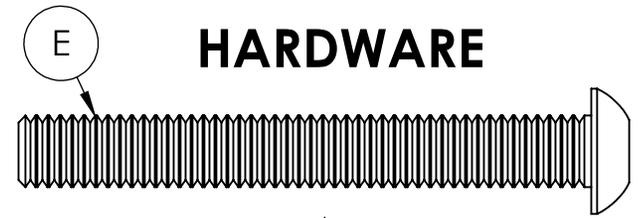


4

3/8" x 3" Button Head Cap Screws

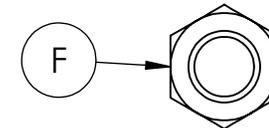


4

3/8" Hex Nuts

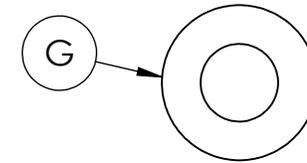


8

3/8" Flat Washer

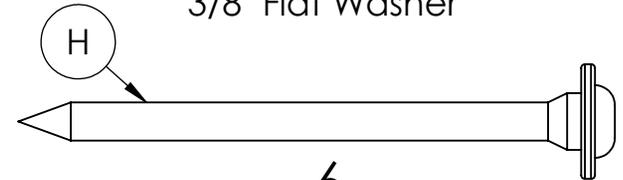

6

Truss Lag Screw

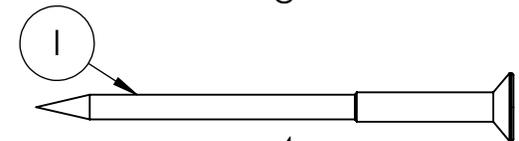

4


#10 x 2.5 Flat Head Screw

**HARDWARE &
TOOLS REQUIRED
FOR ASSEMBLY**


2/5

BENCH INSTRUCTIONS

STEP 1

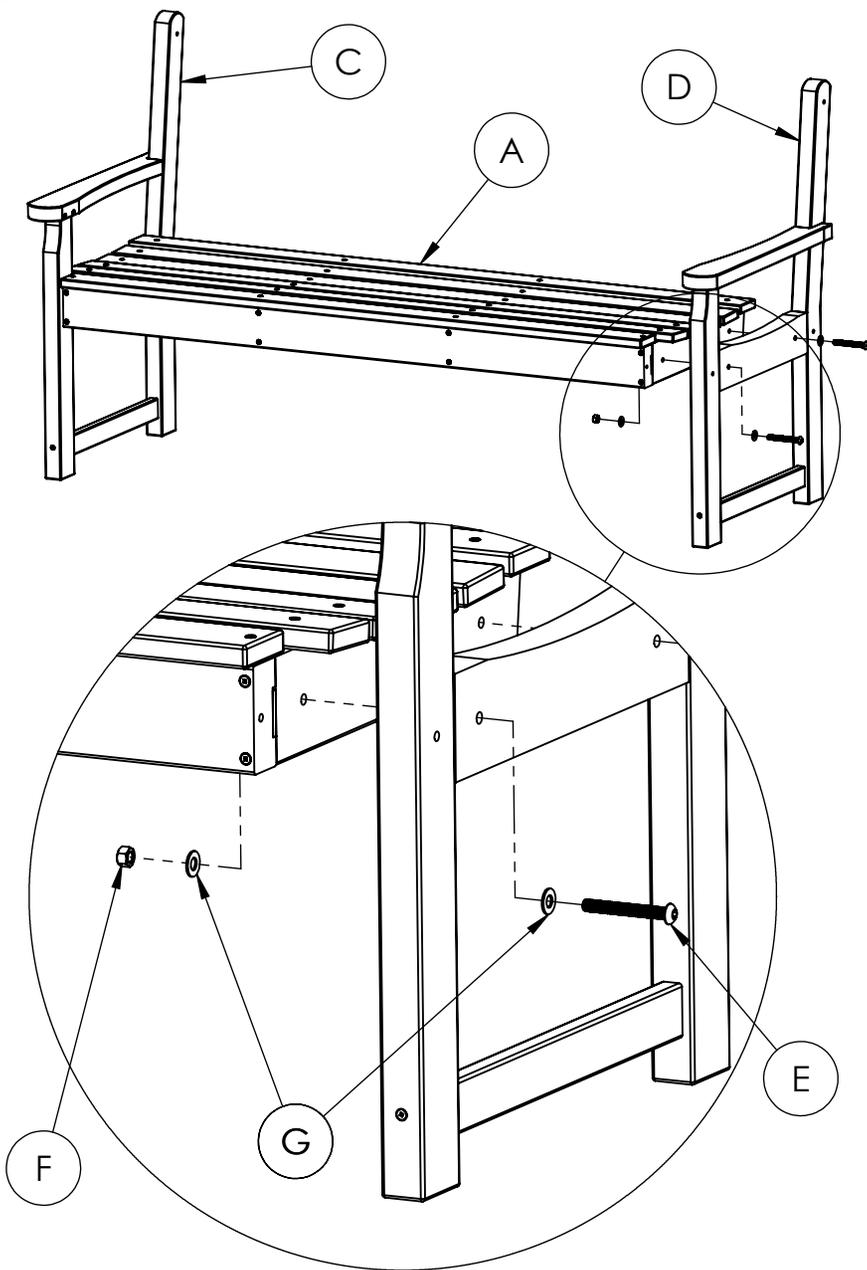


STEP 2




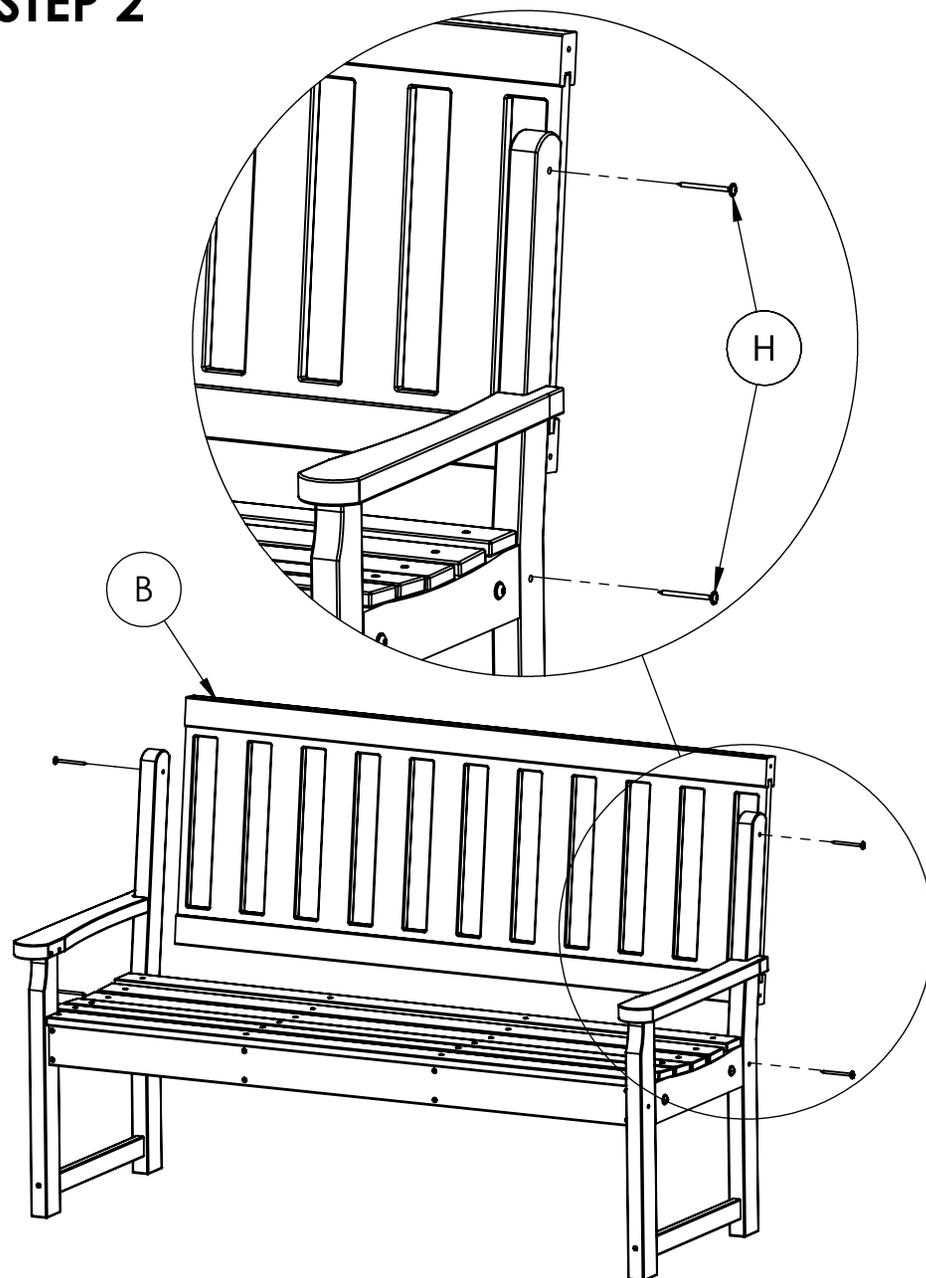


BENCH INSTRUCTIONS

STEP 3

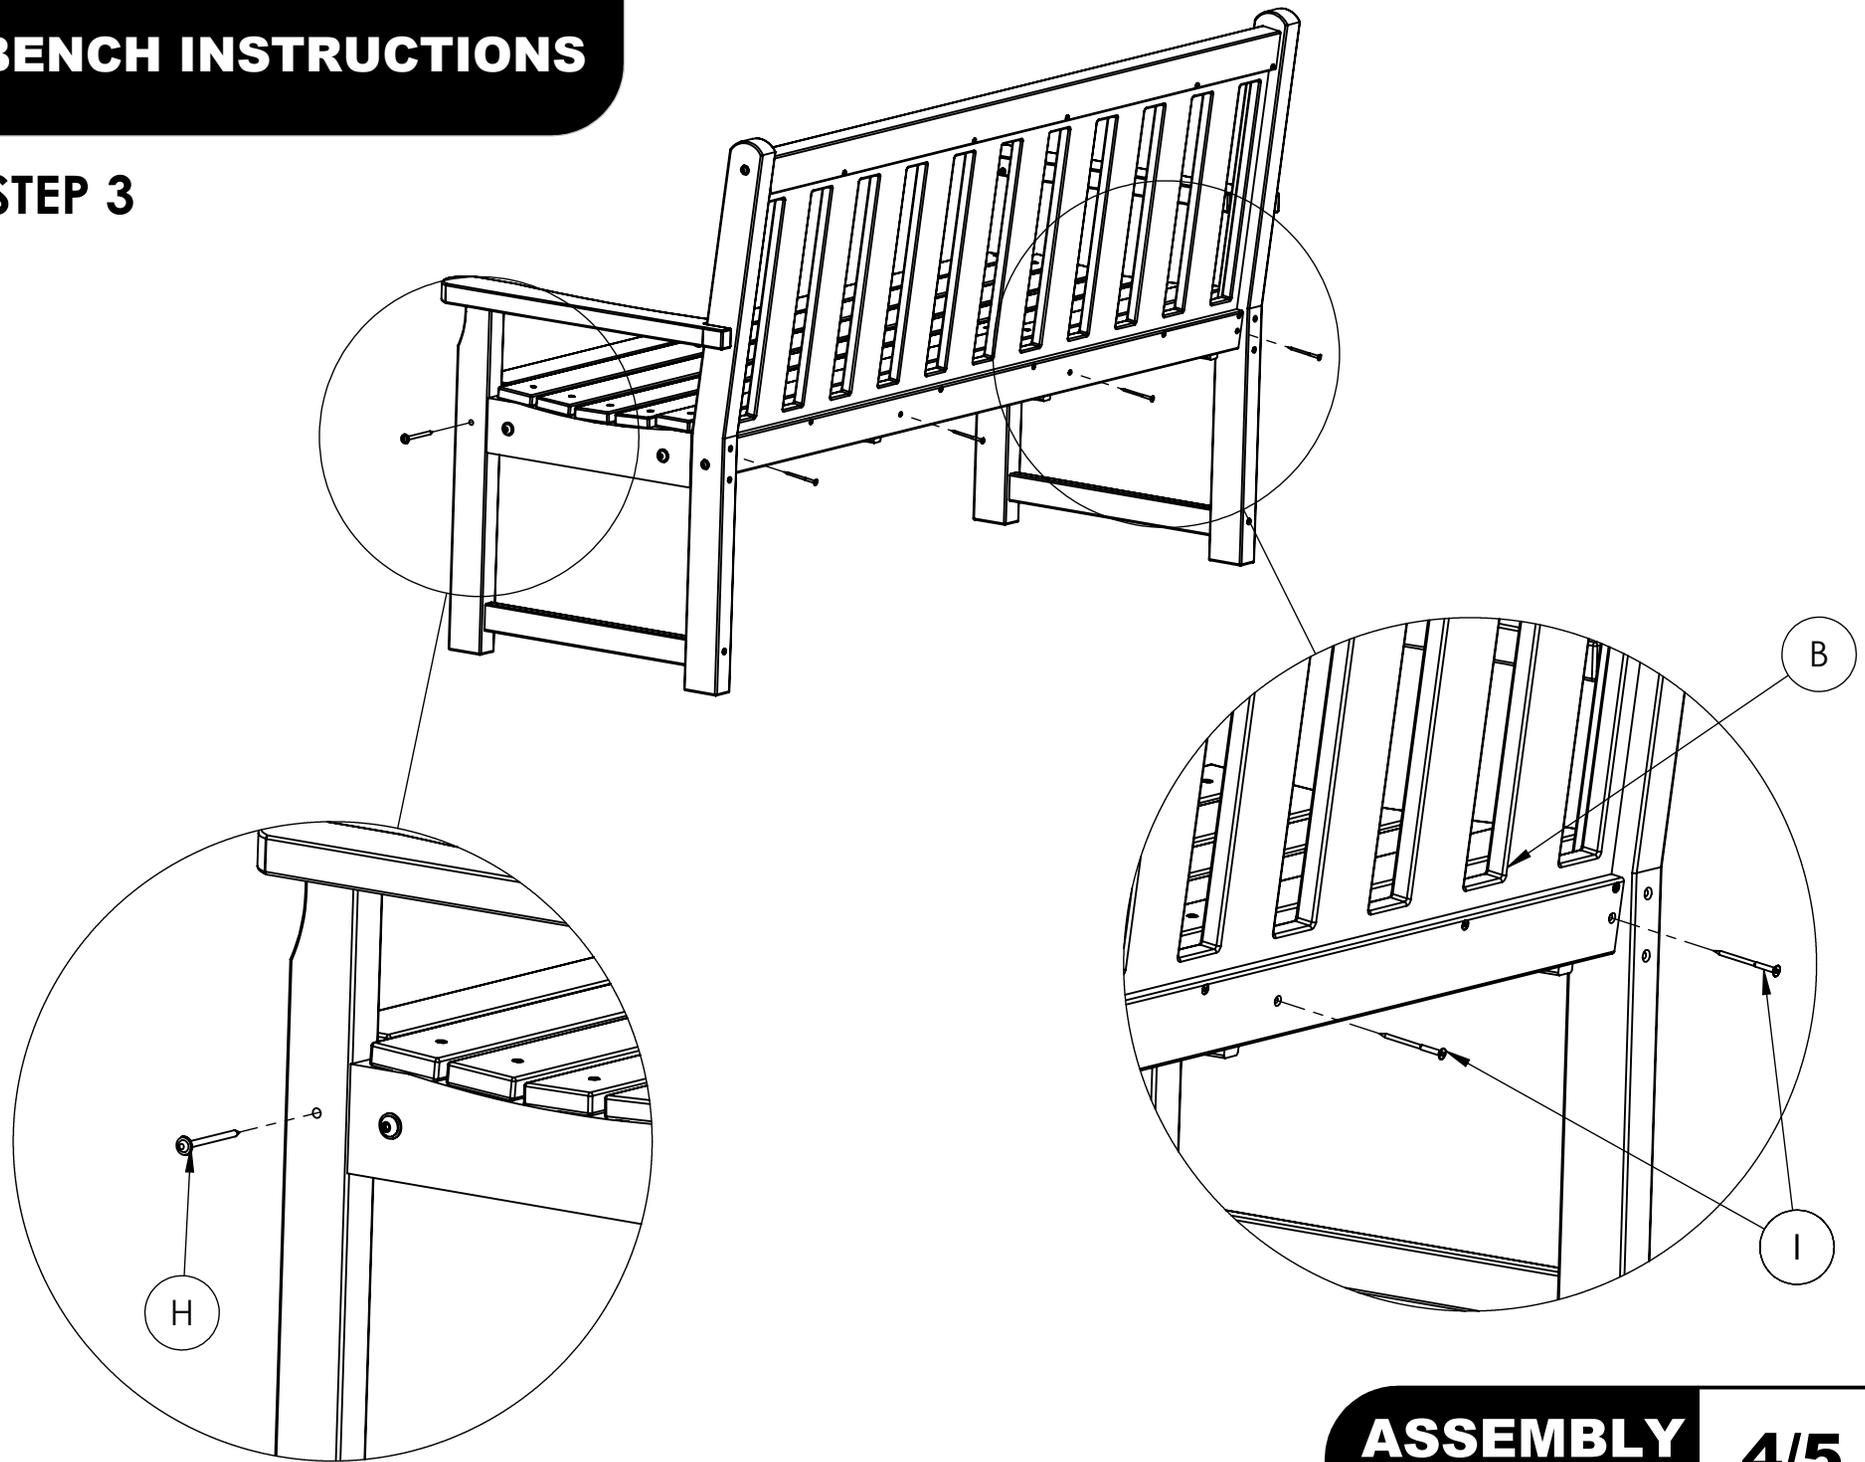

BENCH SPECIFICATIONS

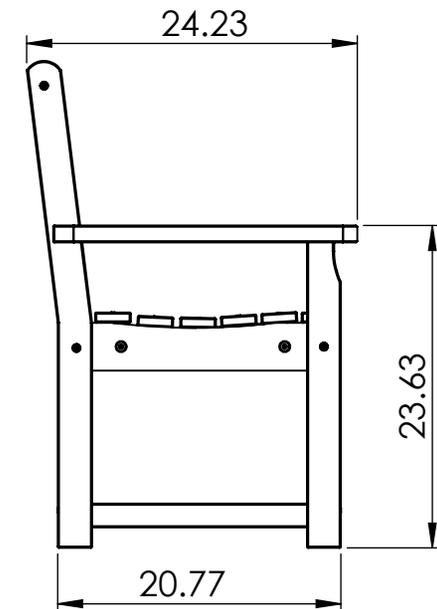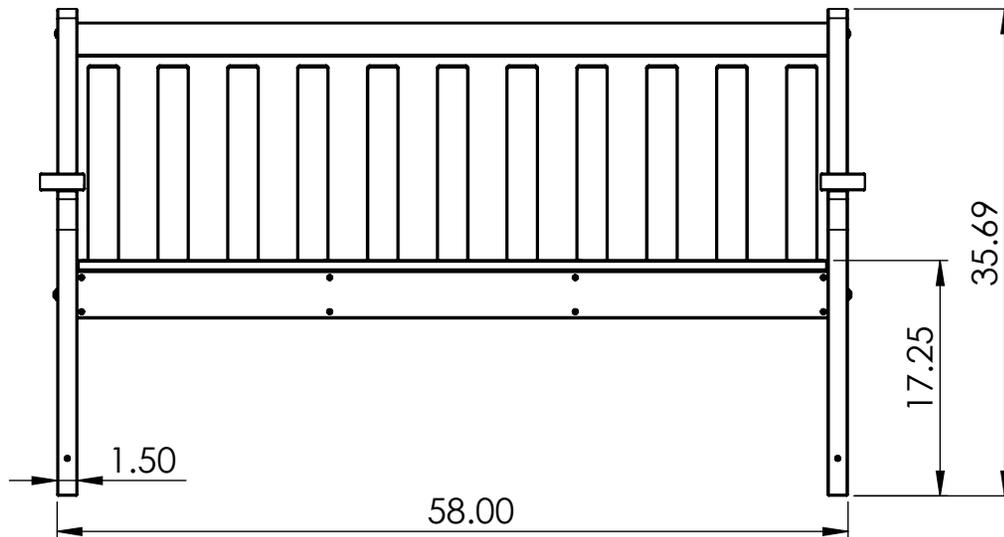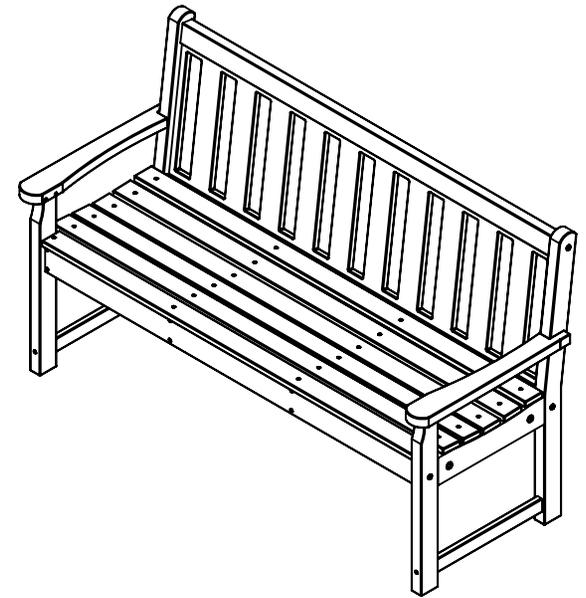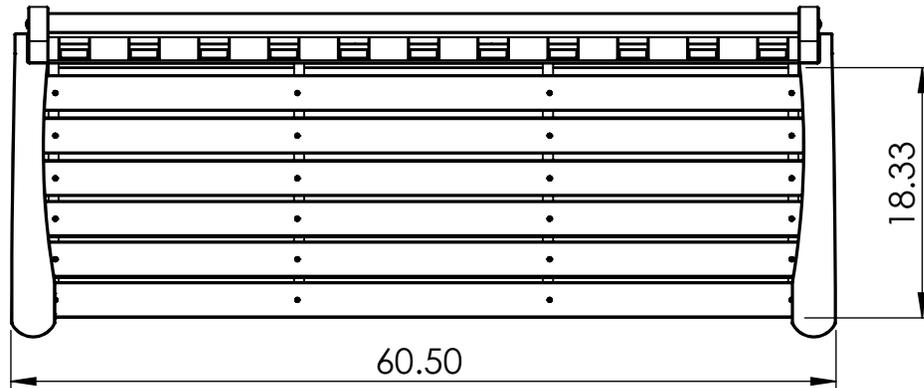

CONSTRUCTION MATERIALS:
Recycled Plastic
HARDWARE:
Stainless Steel

ALL DIMENSIONS SHOWN IN INCHES