


# INSTRUCTIONS


Square Portable Picnic Table - Wheelchair Accessible

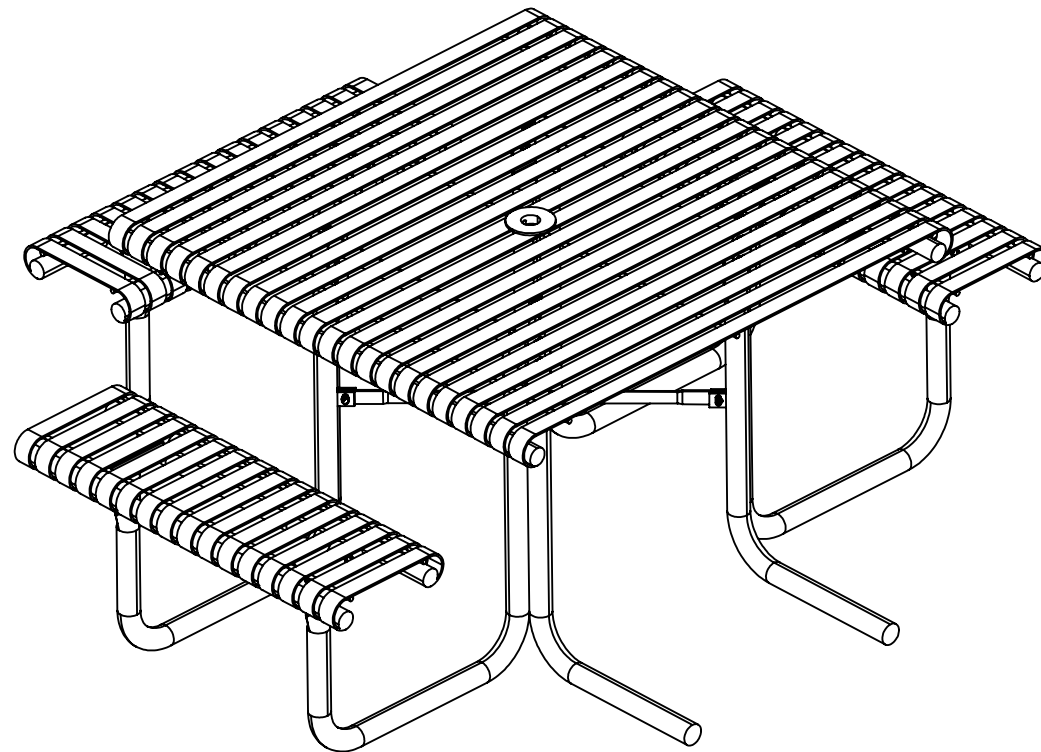


# INSTRUCTIONS

Round ADA Picnic Tables


## COMPONENTS

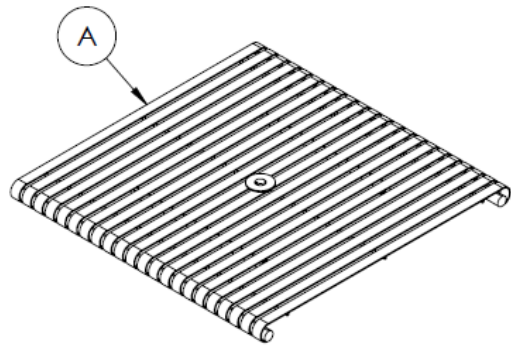


1  
Table Top

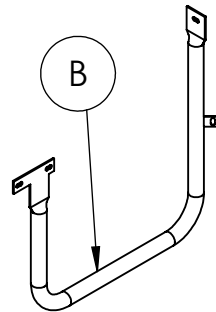


3  
Left Legs

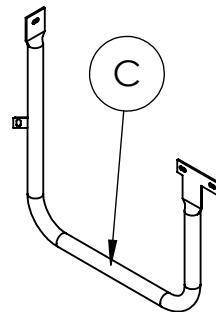


3  
Right Legs

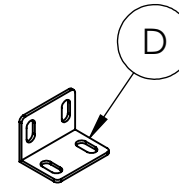


4  
Corner Brackets

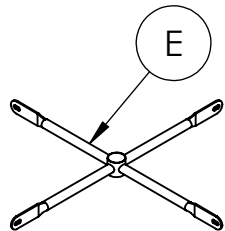


1  
Center Cross Brace

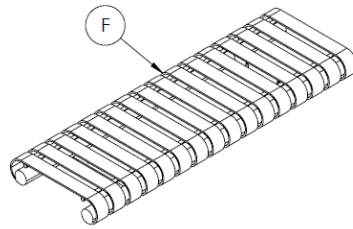

3  
Seats

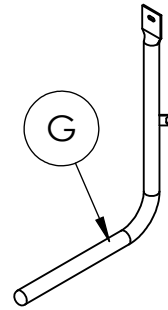


1  
Left ADA Leg

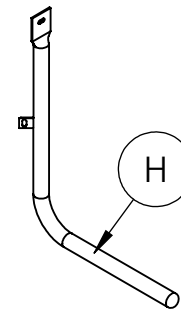


1  
Right ADA Leg


## HARDWARE

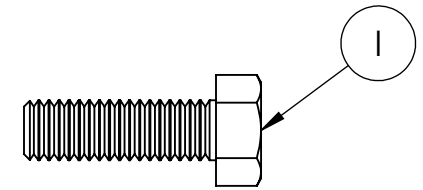

32  
M8 x 25  
HEX HEAD BOLTS

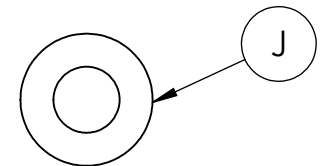

64  
M8 Flat Washer

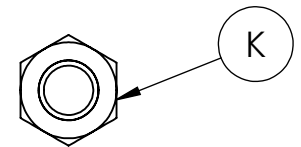

32  
M8 Hex Nut

## REQUIRED TOOLS (NOT INCLUDED)



1 - 13MM WRENCH  
1 - 13MM SOCKET

**NOTE: IT IS IMPORTANT TO KEEP ALL BOLTS FINGER TIGHT DURING ASSEMBLY UNTIL ENTIRE TABLE IS ASSEMBLED**



**HARDWARE &  
TOOLS REQUIRED  
FOR ASSEMBLY**

**2/4**

# INSTRUCTIONS

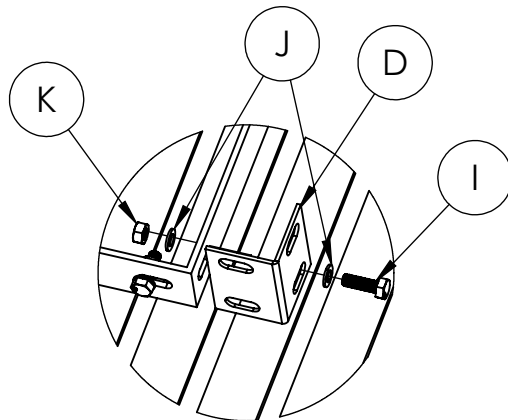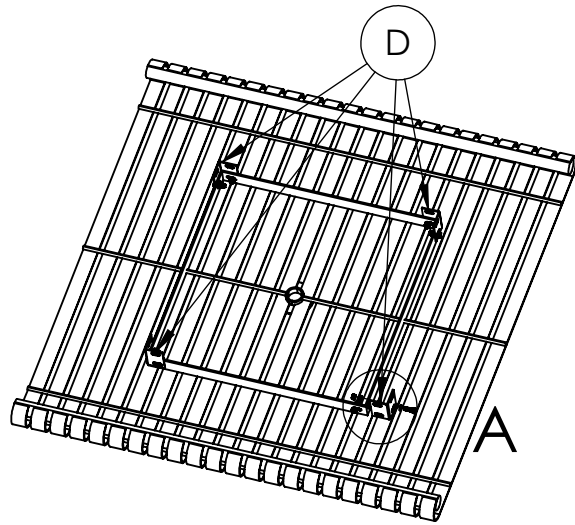

DETAIL A

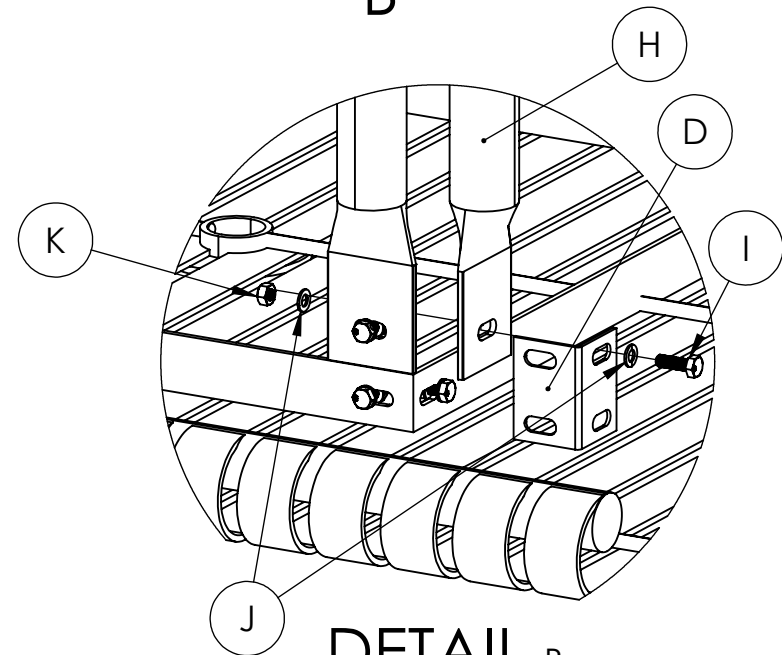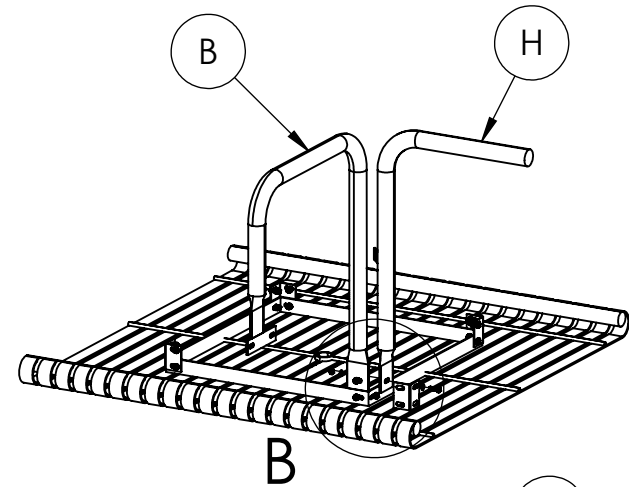



DETAIL B

INSTALL FASTENERS IN ALL FOUR LOCATIONS

**ATTACH  
TABLE LEGS**

**3/5**

# INSTRUCTIONS

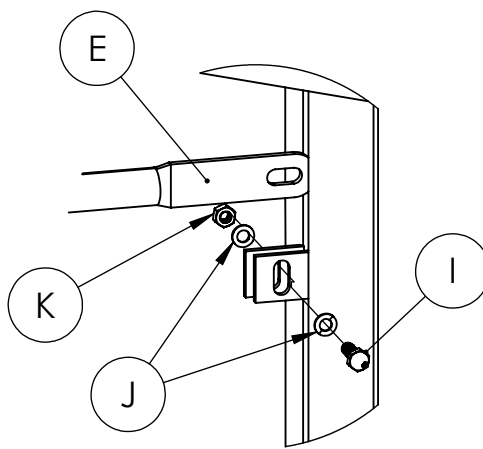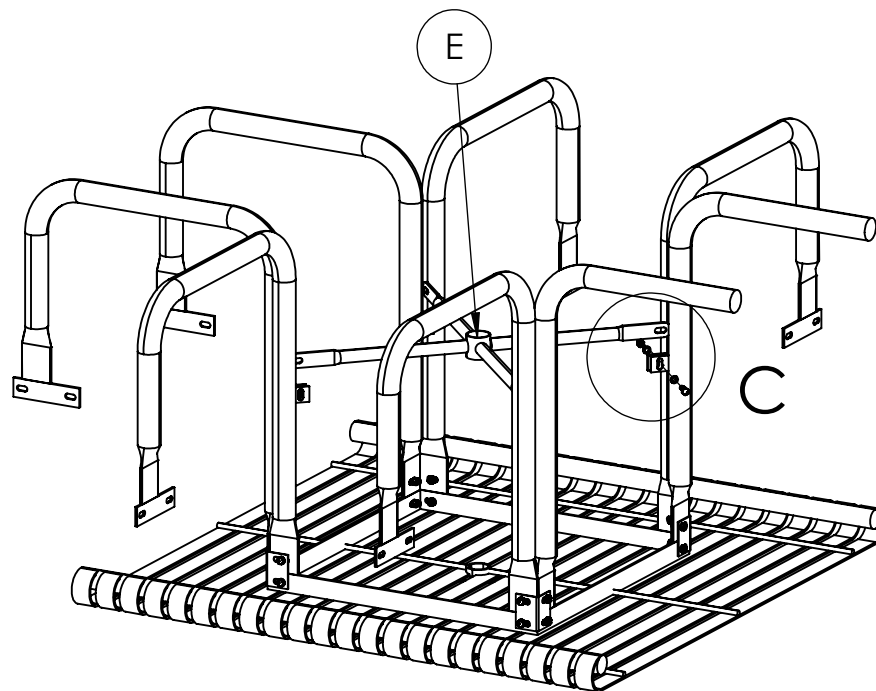



DETAIL C

INSTALL FASTENERS IN ALL FOUR LOCATIONS

**ATTACH  
TABLE LEGS**

**4/5**

# INSTRUCTIONS

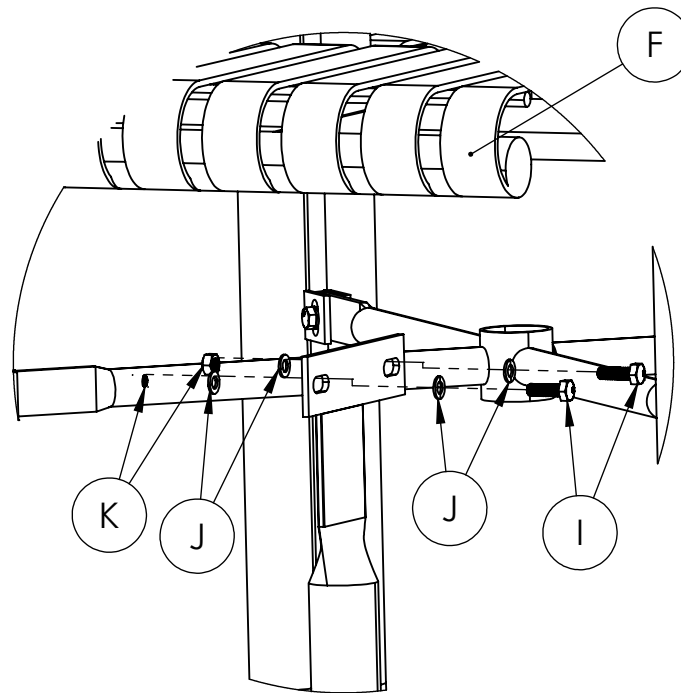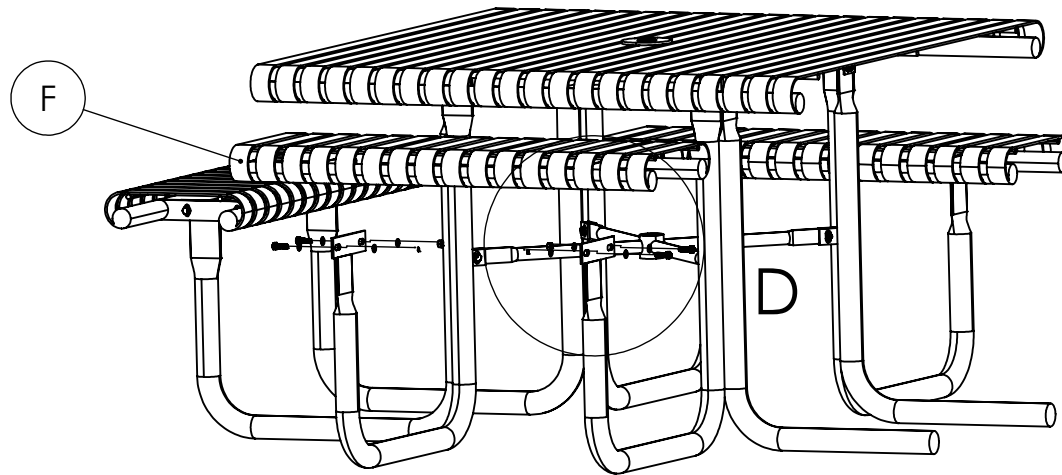

INSTALL FASTENERS IN ALL FOUR LOCATIONS

DETAIL D

**ATTACH  
SUPPORT AND  
SEATS**

**5/5**